

DIGITAL CAMERA


**OLYMPUS**<sup>®</sup>

# Stylus 820 / $\mu$ 820

## Instruction Manual

### Quick Start Guide

Get started using your camera right away.

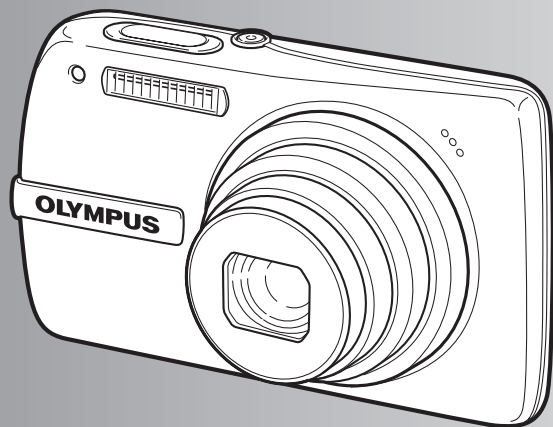

**Button operations**

**Menu operations**

**Printing pictures**

**Using OLYMPUS Master**

**Getting to know your camera better**

**Appendix**

- Thank you for purchasing an Olympus digital camera. Before you start to use your new camera, please read these instructions carefully to enjoy optimum performance and a longer service life. Keep this manual in a safe place for future reference.
- We recommend that you take test shots to get accustomed to your camera before taking important photographs.
- In the interest of continually improving products, Olympus reserves the right to update or modify information contained in this manual.
- The screen and camera illustrations shown in this manual were produced during the development stages and may differ from the actual product.

# Contents

## Quick Start Guide P. 3

---

## Button operations P. 11

---

Test out the functions of the camera buttons by following along with the illustrations.

## Menu operations P. 19

---

Learn about the menus that control the functions and settings for basic operation.

## Printing pictures P. 39

---

Learn how to print pictures you have taken.

## Using OLYMPUS Master P. 45

---

Learn how to transfer and save pictures to a computer.

## Getting to know your camera better P. 53

---


Find out more about camera operations and how to take better pictures.

## Appendix P. 64


---

Read about convenient functions and safety precautions on how to use your camera more effectively.


## Gather these items (box contents)

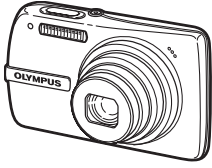


Digital Camera

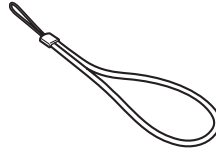


Strap

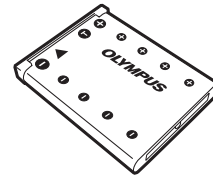


LI-42B  
Lithium Ion Battery

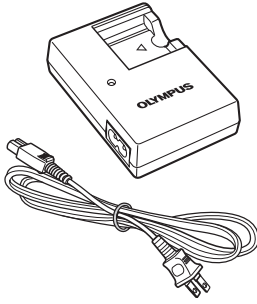

LI-40C  
Battery Charger

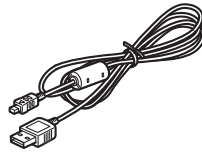

USB Cable

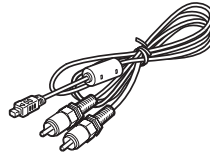

AV Cable




OLYMPUS Master 2  
Software CD-ROM

Items not shown: Instruction Manual (this manual), warranty card. Contents may vary depending on purchase location.

Quick Start Guide


### Attach the strap

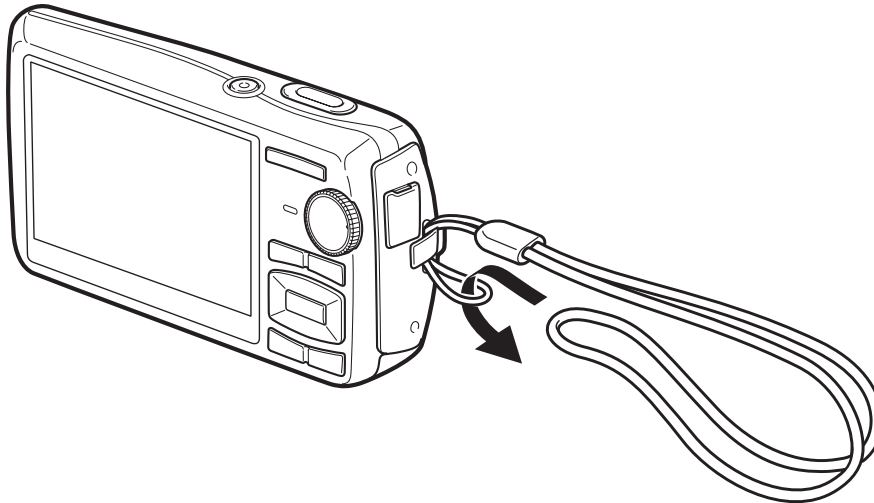

- Pull the strap tight so that it does not come loose.


# Prepare the camera

## a. Charge the battery.

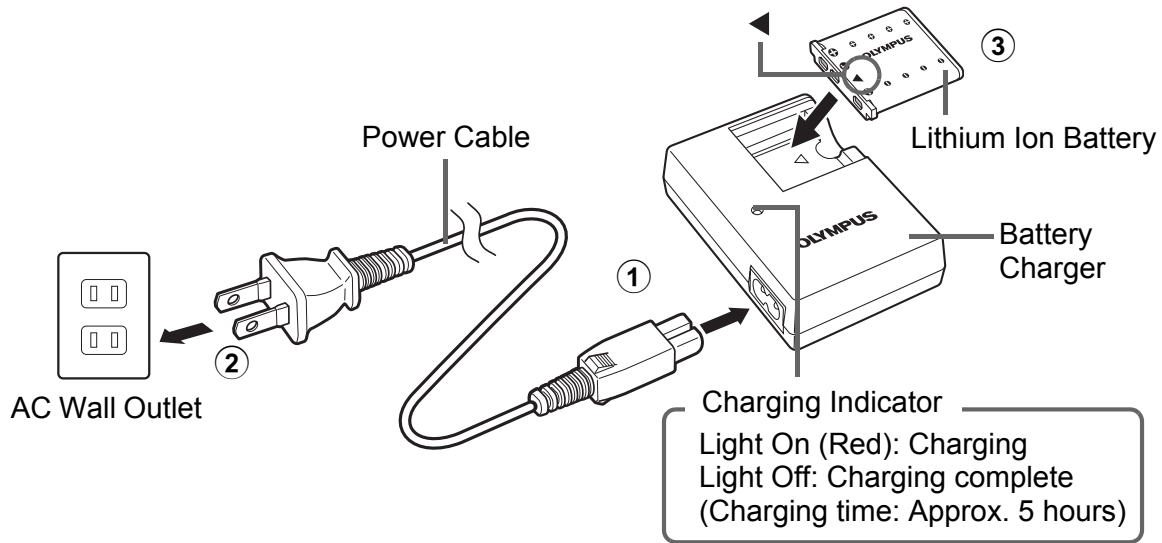

- Battery comes partially charged.


## b. Insert the battery and an xD-Picture Card (optional).

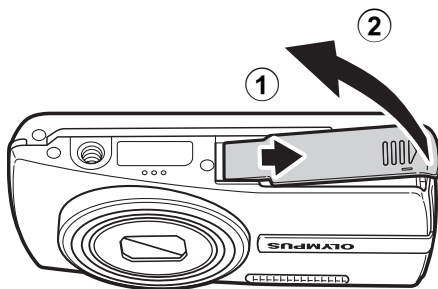


- Insert the battery by putting in the ▼ marked side first, with the ⊕ marks toward the battery lock knob.

If you insert the battery incorrectly, you will not be able to remove it. Do not use force. Contact authorized distributors/service centers.

Damage to the battery exterior (scratches, etc.) may produce heat or an explosion.

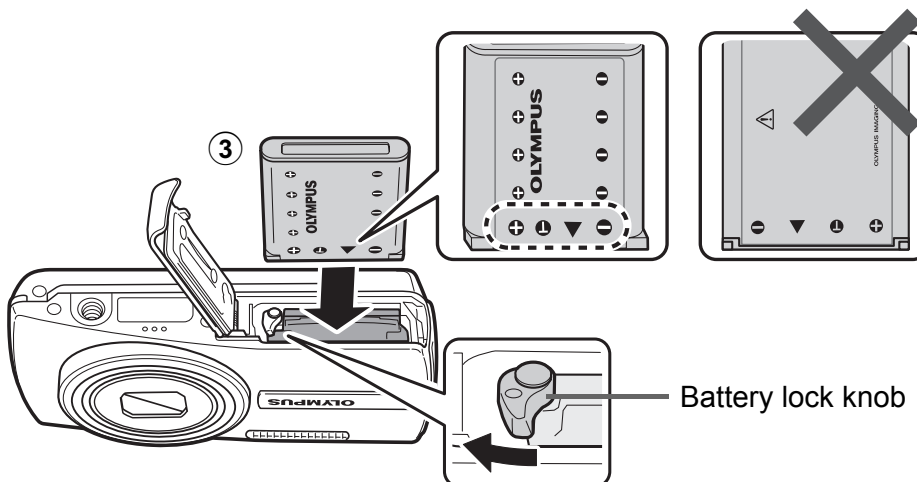


- To remove the battery, slide the battery lock knob in the direction of the arrow.

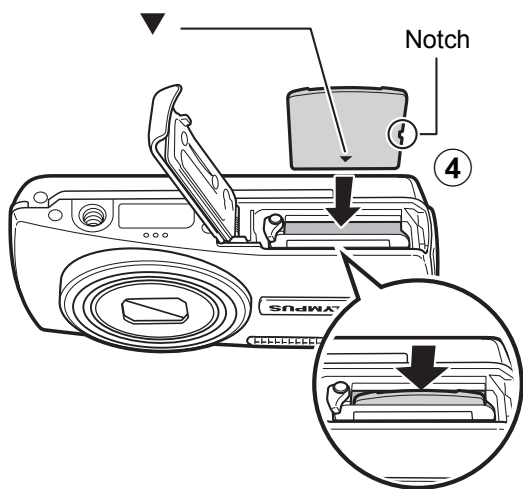

- Orient the card as shown, and insert the card straight in until it clicks into place.

- To remove the card, push the card all the way in, release slowly, grasp the card, then remove.

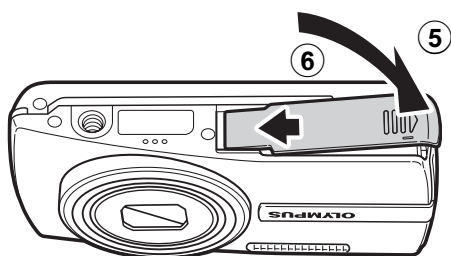


- You can shoot pictures with this camera even without using an optional xD-Picture Card™ (hereinafter referred to as “the card”). If you shoot pictures with this camera without using an xD-Picture Card, the pictures will be recorded in the internal memory. For details on the card, please refer to “The card” (P. 66).



# Turn the camera on

This explains how to turn on the camera in shooting mode.

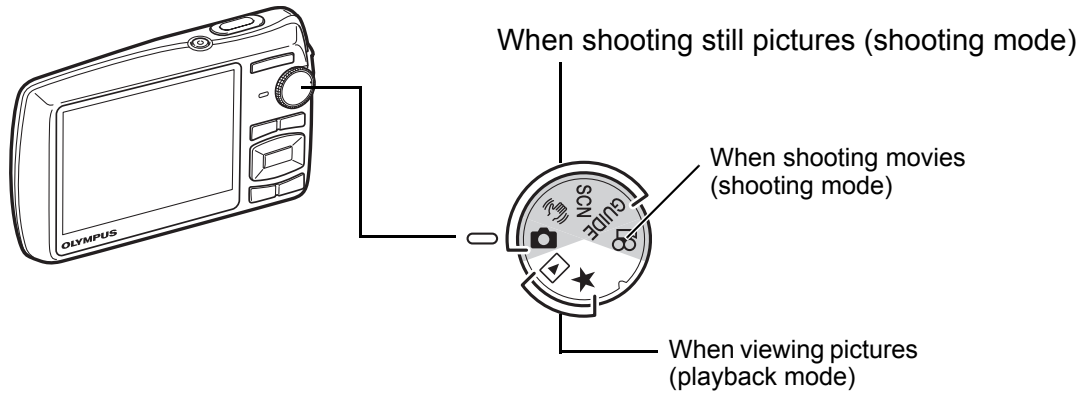
a. Set the mode dial to .



## Still picture shooting modes


 
	This function allows you to shoot with the camera's automatic settings.
	This function reduces the blur incurred by a moving subject, or camera shake when taking pictures.
<b>SCN</b>	This function allows you to shoot pictures by selecting a scene according to the shooting condition.
<b>GUIDE</b>	This function allows you to set the target items by following the shooting guide displayed on the screen.


b. Press the **POWER** button.

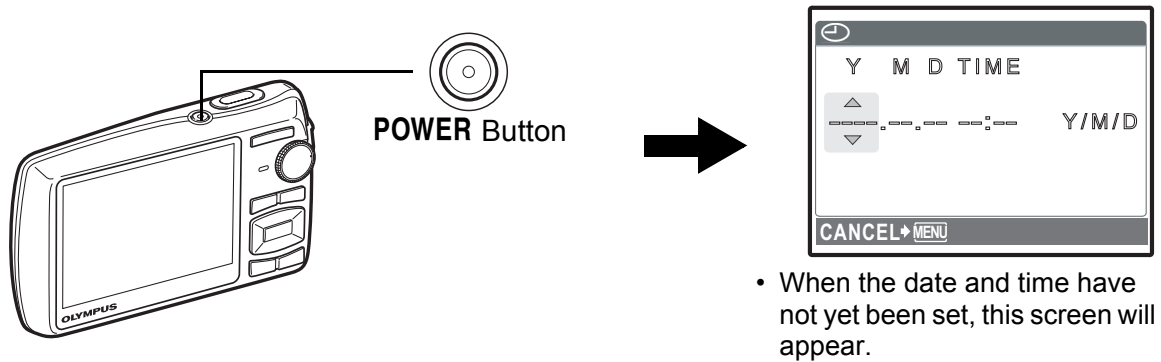

● To turn off the camera, press the **POWER** button once again.


## Hint

The directions of the arrow pad () are indicated with  in this manual.

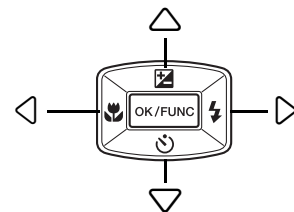


# Set date and time

## About the date and time setting screen

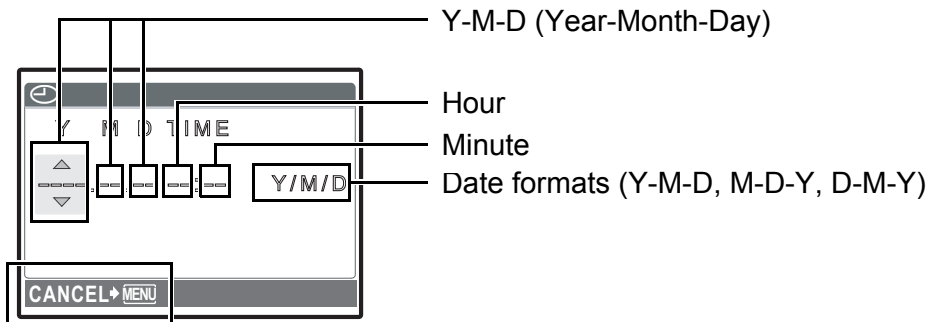


Exits a setting.


- a. Press the button and the button to select [Y].
- The first two digits of the year are fixed.

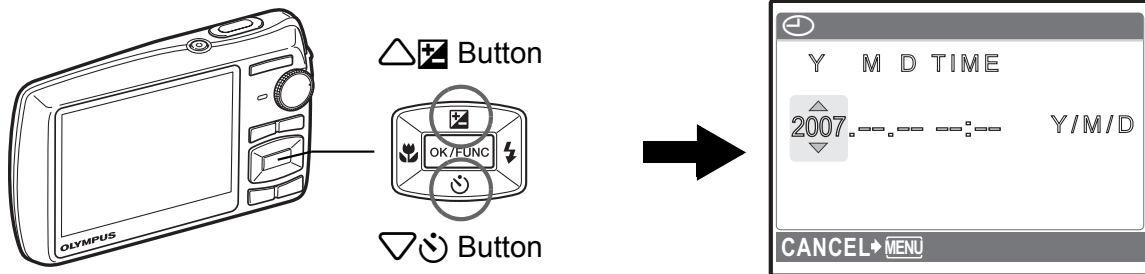

- b. Press the button.

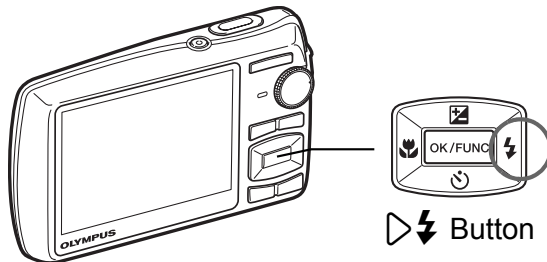


- c. Press the button and the button to select [M].

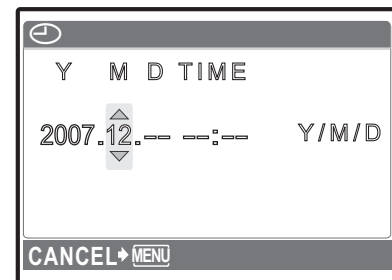


- d. Press the button.




## Set date and time

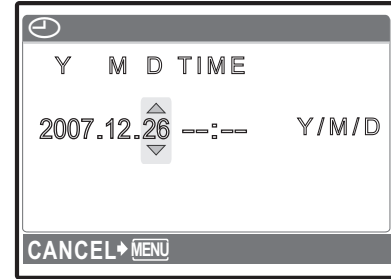
- e. Press the  button and the  button to select [D].

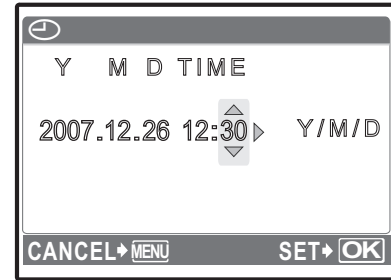



- f. Press the  button.  
g. Press the  button and the  button to select the hours and minutes.  
• The time is displayed in the 24-hour format.



- h. Press the  button.  
i. Press the  button and the  button to select [Y/M/D].

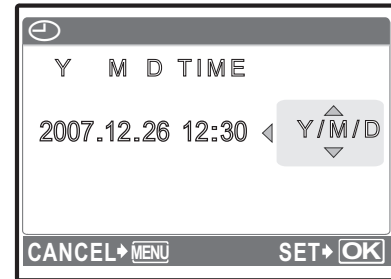


- j. After all items have been set, press the  button.  
• For precise time setting, press the  button as the time signal strikes 00 seconds.

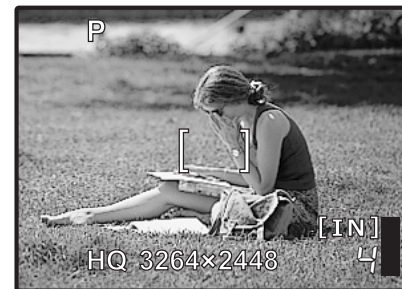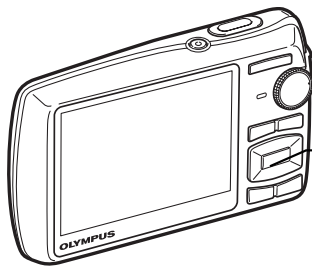


# Take a picture

## a. Hold the camera


Horizontal grip

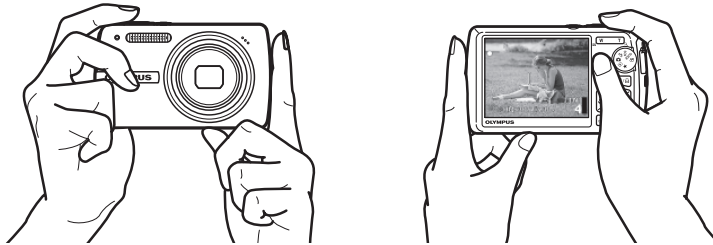

Vertical grip

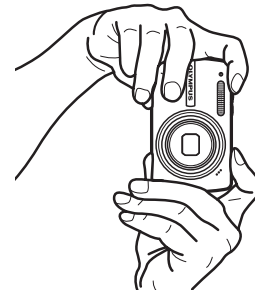


## b. Focus

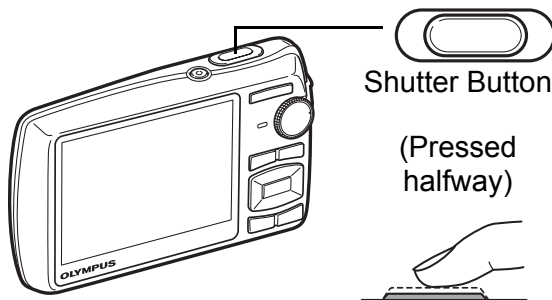

Shutter Button

(Pressed halfway)


Place this mark over your subject.

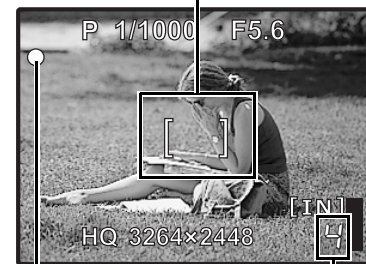

The number of storable still pictures is displayed.

When the focus and exposure are locked, the green lamp lights up, and the shutter speed and aperture value are displayed.


## c. Shoot

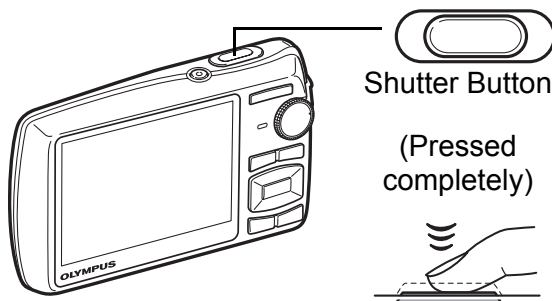

Shutter Button


(Pressed completely)

The card access lamp blinks.

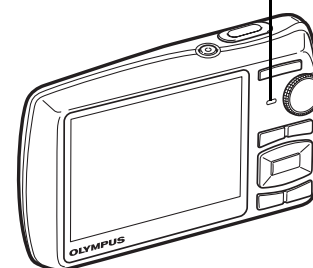


# View pictures

- a. Set the mode dial to .

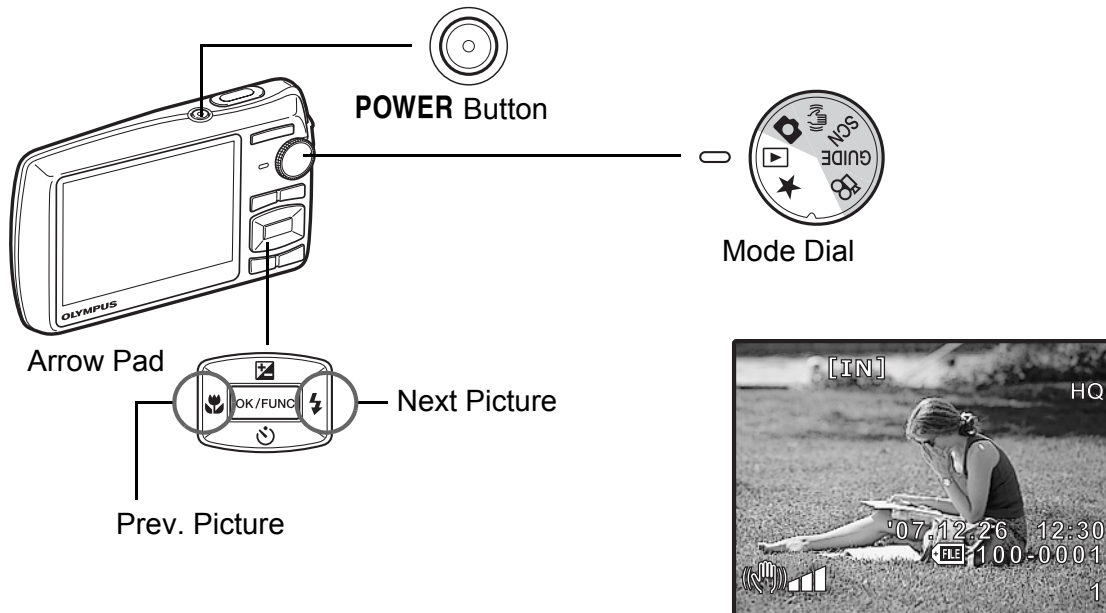


## Erase pictures



- a. Press the  button and the  button to display the picture that you want to erase.  
b. Press the  button.

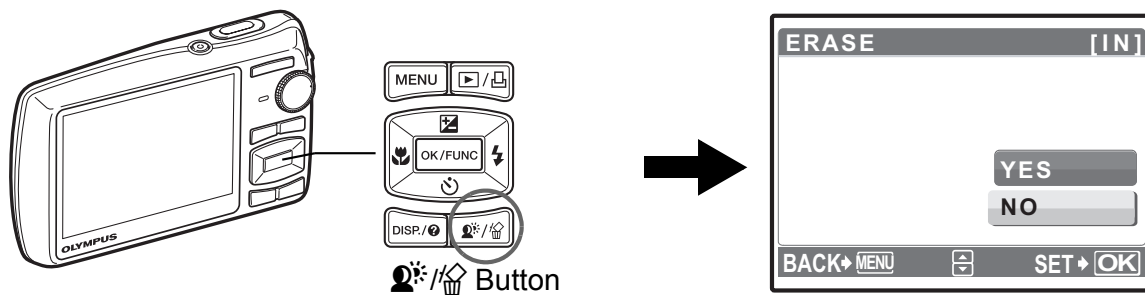

- c. Press the  button to select [YES] and press the  button to erase the picture.

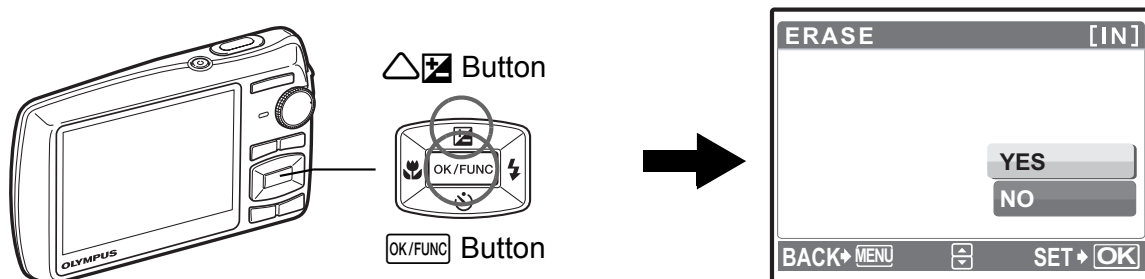

# Button operations

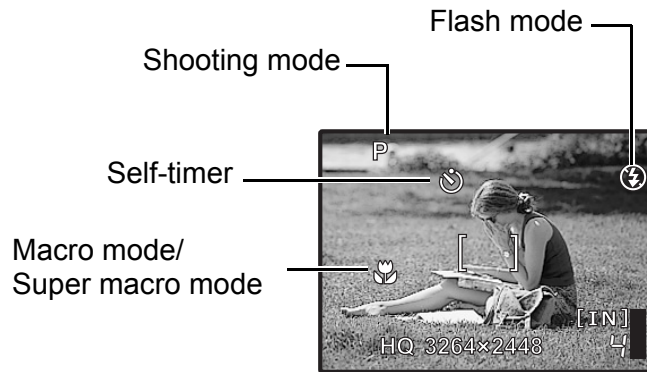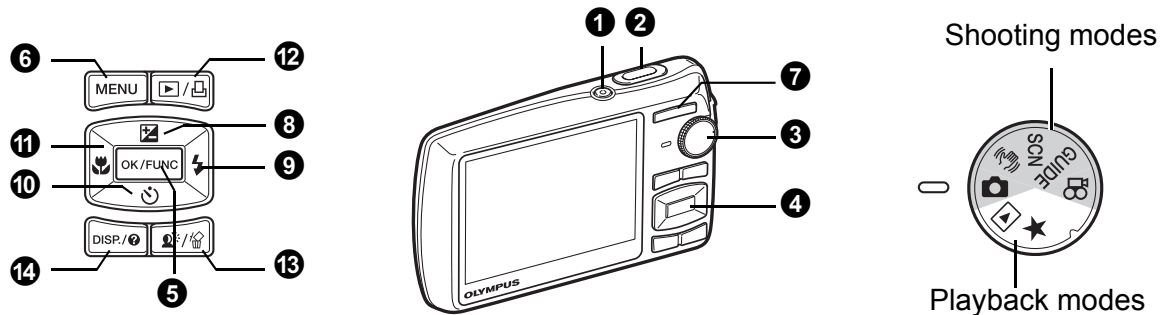

## 1 POWER button

Turning the camera on and off

Power on:

- Shooting mode
- Lens extends
- Monitor turns on


- Playback mode
- Monitor turns on

## 2 Shutter button

Shooting pictures

### Shooting still pictures

Set the mode dial to , , **SCN** or **GUIDE**, and lightly press the shutter button (halfway). When the focus and exposure are locked, the green lamp lights up (focus lock), and the shutter speed and aperture value are displayed (only when the mode dial is set to , ). Now press the shutter button all the way (completely) to shoot a picture.

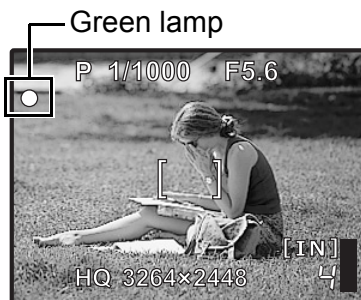

### Focus lock - Locking the focus and then composing the shot

Compose your picture with the focus locked, and then fully press the shutter button to shoot a picture.

- If the green lamp blinks, the focus is not adjusted properly. Try locking the focus again.

### Recording movies

Set the mode dial to , and press the shutter button halfway to lock the focus, and then press the shutter button completely to start recording. Press the shutter button again to stop recording.

Set the mode dial to the desired shooting or playback mode.

 **Shooting still pictures**

The camera determines the optimum settings for the shooting conditions automatically.

 **Shooting pictures using digital image stabilization**

This function reduces the blur caused by a moving subject or camera movement when taking pictures.

- By switching to another mode, most settings will be changed to the default settings of each mode.

**SCN** Shoot pictures by selecting a scene mode according to the situation


You can shoot pictures by selecting a scene mode according to the situation.

**Select a scene mode/change another scene mode to another one**

- Press **MENU** to select [SCN] from the top menu, and change it to another scene mode.
- By switching to another scene mode, most settings will be changed to the default settings of each scene mode.

 **SCN** (Scene) Selecting a scene mode according to the shooting situation” (P. 24)

**GUIDE** Follow the shooting guide to take better pictures

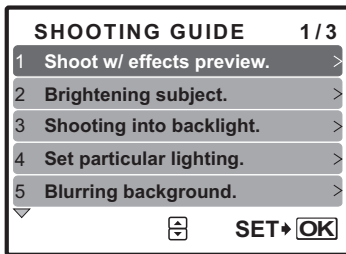

Follow the shooting guide displayed on the screen to set the target items.

- Press **MENU** to display the shooting guide again.
- To change the setting without using the shooting guide, set the shooting mode to another one.
- The content set using the shooting guide will change to the default setting by pressing **MENU** or changing the mode using the mode dial.

**Shoot pictures by comparing previews of different effects**



Select one of the [1 Shoot w/ effects preview.] options from the [SHOOTING GUIDE] menu to preview a live, multi-frame window on the monitor showing four different levels of the selected shooting effect. You can use the four preview frames to compare and select your desired setting/effect.

- Use the arrow pad to select the frame with the settings you want, and press **OK/FUNC**. The camera automatically switches to shooting mode and allows you to shoot with the selected effect.

When [Exposure effects.] is selected

Use   to change the display.

Button operations

## Recording movies

Audio is recorded with the movie.



This icon lights red during movie recording.

The remaining recording time is displayed. When the remaining recording time reaches 0, recording will stop automatically.


## Viewing still pictures/Selecting playback mode


The last picture taken is displayed.

- Press the arrow pad to view other pictures.
- Use the zoom button to switch between close-up playback, index display and calendar display.
- Press **OK/FUNC** to hide the information displayed on the screen for 3 seconds during single-frame playback.

 “MOVIE PLAY Playing back movies” (P. 28)

### Viewing panoramic pictures taken with **[COMBINE IN CAMERA 1/2]** (Panorama playback)

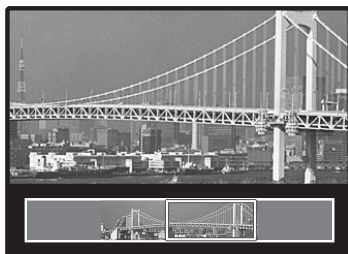


- Use the arrow pad to select a panoramic picture, and then press **OK/FUNC**. Scroll to the right (or scroll up for a rotated picture) starts automatically.
  - Use the zoom button to zoom in or out while a picture is scrolling. Use the arrow pad to change the scrolling direction of a zoomed in picture.
  - To stop or resume scrolling in the original magnification, press **OK/FUNC**.
  - To exit panorama playback, press **MENU**.
-  “PANORAMA Taking and combining panoramic pictures” (P. 22)

## Viewing “My Favorite”




The still pictures registered in “My Favorite” are displayed.

- Press the arrow pad to view other pictures.
- Use the zoom button to switch among close-up playback and index display.

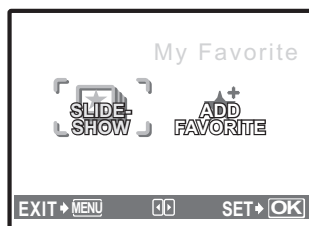

Press **MENU** during “My Favorite” playback to display the top menu, and then select **[SLIDESHOW]** or **[ADD FAVORITE]**.

-  “SLIDESHOW Playing back pictures automatically” (P. 28)
- “ADD FAVORITE Adding favorite images” (P. 30)

## Erasing pictures from “My Favorite”

YES/ NO

- Use the arrow pad to select the picture you want to erase, and press . Select [YES], and press .
- Erasing a picture from “My Favorite” does not erase the original picture recorded in the internal memory or to the card.

### 4 Arrow pad ( )

Use the arrow pad to select scenes, playback picture, and the items on the menus.

### 5 button (OK/FUNC)

Displays the function menu which contains the functions and settings used during shooting. This button is also used to confirm your selection.

#### The functions you can set with the function menu

#### P/AUTO ..... Shooting pictures with automatic settings


Select the shooting mode when you have set the mode dial to .

P (Program auto)	The camera automatically sets the optimum aperture value and shutter speed for the brightness of the subject.
AUTO (Full auto mode)	The camera automatically sets white balance and ISO sensitivity in addition to the aperture and shutter speed.

#### Other functions you can set with the function menu

- “WB Adjusting the color of a picture” (P. 25)
- “ISO Changing the ISO sensitivity” (P. 25)
- “DRIVE Using sequential (continuous) shooting” (P. 26)
- “ESP/ Changing the area for measuring the brightness of a subject” (P. 26)

Function menu

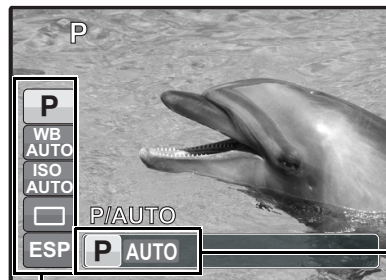

: Select a setting, and press .

: Select the function to be set.

### 6 MENU button (MENU)

Displaying the top menu

Displays the top menu.

## 7 Zoom button

### Zooming while shooting/close-up playback

#### Shooting mode: Zooming in on your subject

Optical zoom ratio: 5×

Zoom out:  
Press W on the  
zoom button.





Zoom in:  
Press T on the  
zoom button.

#### Playback mode: Changing the picture display




##### Single-frame playback

- Use the arrow pad to browse pictures.

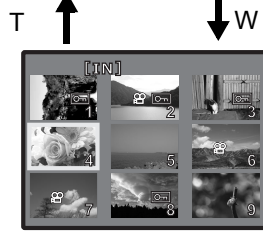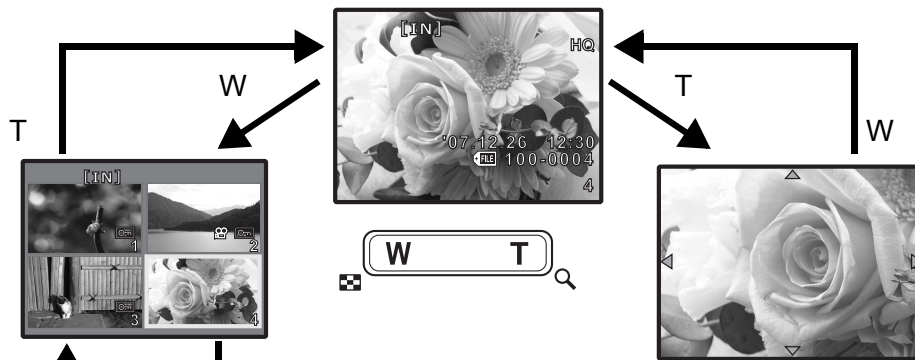

##### Index display

- Use the arrow pad to select a picture for playback, and press **[OK/FUNC]** to play back the single-frame of the picture selected.

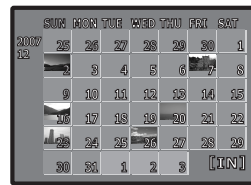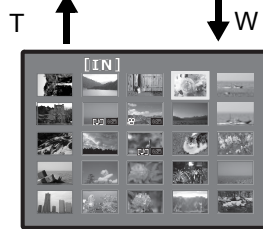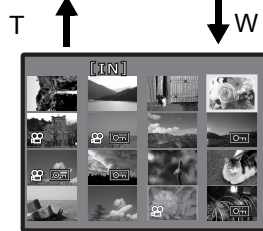

##### Close-up playback

- Press T to incrementally enlarge the picture up to 10 times the original size. Press W to reduce the size.
- Use the arrow pad during close-up playback to scroll around the picture.
- Press **[OK/FUNC]** to return to single-frame playback.

##### Calendar display





- Use the arrow pad to select the date, and press **[OK/FUNC]** or T on the zoom button to display the pictures on the date selected.

**8**  **button**

**Changing picture brightness (Exposure compensation)**


 





 
Use   to change the display.

Press  in shooting mode, and then use the arrow pad   to select a picture in your desired brightness and press .  
 • Adjustable from -2.0EV to +2.0 EV

**9**  **button**


 
**Flash shooting**



Press  in shooting mode to select the flash setting.  
 Press  to confirm your selection.


 Red-eye reduction flash	The flash fires automatically in low light or backlight conditions.
 Fill-in flash	This emits pre-flashes to reduce the occurrence of red-eye in your pictures.
 Flash off	The flash fires regardless of the available light.
 Flash off	The flash does not fire.

**10**  **button**

**Self-timer shooting**



Press  in shooting mode to select on and off for the self-timer.  
 Press  to confirm your selection.


 OFF	Cancel the self-timer.
 ON	Set the self-timer.

- After pressing the shutter button completely, the self-timer lamp lights for approximately 10 seconds, blinks for approximately 2 seconds, and then the picture is taken.
- To cancel the self-timer, press .
- Self-timer shooting is automatically canceled after one shot.

**11**  **button**

**Shooting pictures close to the subject (Macro)**


Press  in shooting mode to select the macro mode.  
 Press  to confirm your selection.



OFF	Macro mode is deactivated.
 Macro mode	This mode lets you shoot as close as 20 cm/7.9 in. (wide) and 60 cm/23.6 in. (tele) from your subject.
 Super macro mode	This mode lets you shoot as close as 3 cm/1.2 in. from your subject. If the distance between the camera and the subject is over 70 cm/27.6 in., the picture will be out of focus.

- Zoom and flash cannot be used in super macro mode.


 **Viewing pictures immediately**

Press  in shooting mode to switch to playback mode and display the last picture taken.

Press  again or press the shutter button halfway to return to shooting mode.



 “ Viewing still pictures/Selecting playback mode” (P. 13)

 **Printing pictures**

When a printer is connected to the camera, display the picture you want to print in playback mode and press .



 “EASY PRINT” (P. 39)

 **Brightening the subject against backlight**

Press  in shooting mode to turn on or off Shadow Adjustment Technology. Press  to set. A rectangular frame appears on the detected shadowy area. This function makes the subject's face appear brighter even against backlight and enhances the background in the picture.

SHADOW ADJ. OFF	Shadow Adjustment Technology is deactivated.
-----------------	--

SHADOW ADJ. ON	Shadow Adjustment Technology is activated.
----------------	--

- There may be cases in which the camera cannot detect a face.
- When [SHADOW ADJ. ON] is selected, the following setting restrictions apply.
  - [ESP/] is fixed at [ESP].
  - [AF MODE] is fixed at [FACE DETECT].
  - [PANORAMA] is not available.
- When [DRIVE] is set to , this function activates only for the first shot.
- In some cases, it takes some time to display a detection frame.

 **Erasing pictures**

In playback mode, select the picture you want to erase, and press .

- Once erased, pictures cannot be restored. Check each picture before erasing to avoid accidentally erasing pictures you want to keep.

 “ Protecting pictures” (P. 33)


### Changing the information displays

Press DISP./ to change the display in the following order.

#### Shooting mode

#### Playback mode


Button operations

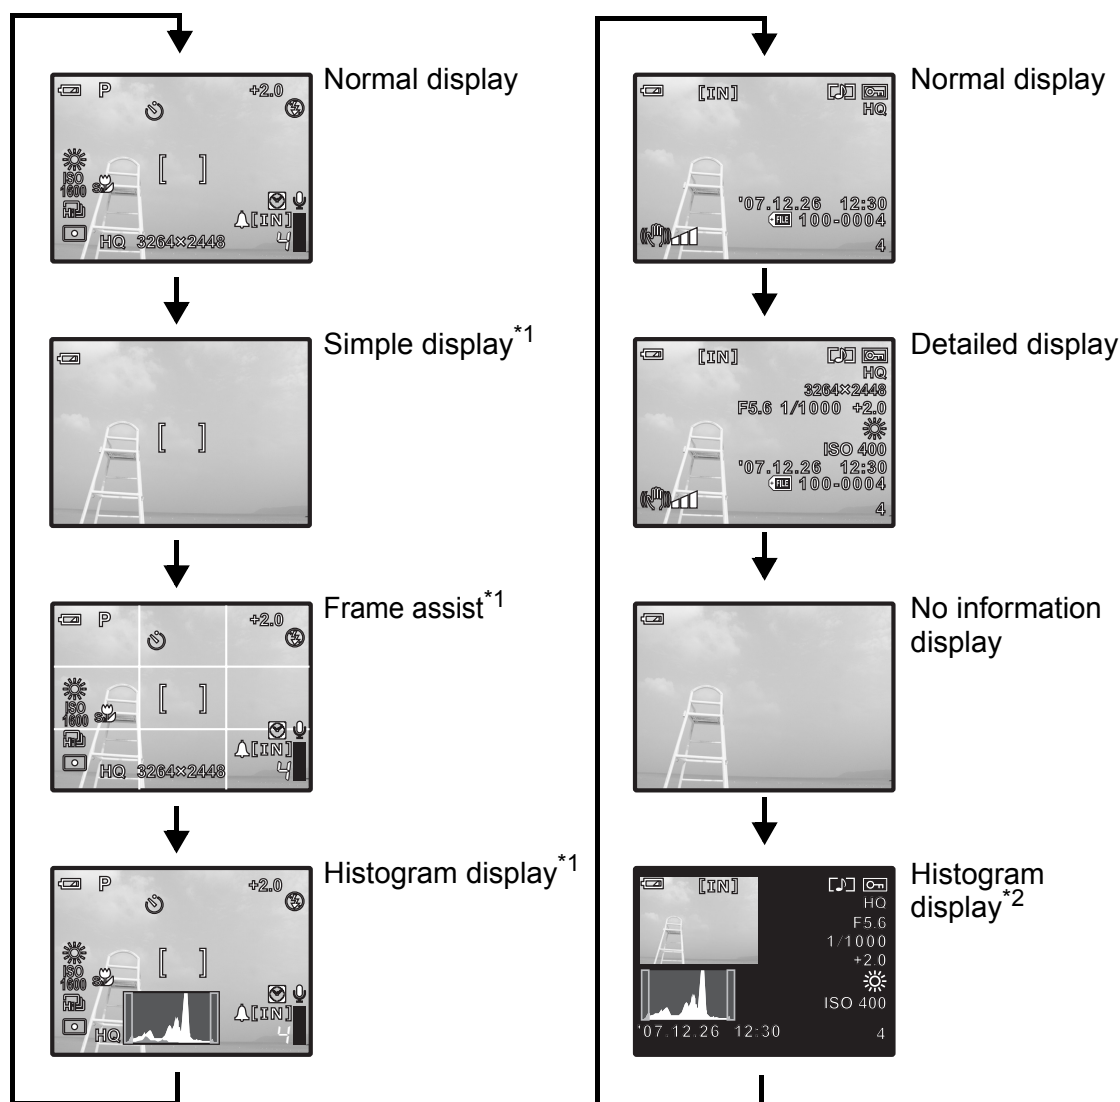

\*1 This is not displayed when the mode dial is set to or **GUIDE**.

\*2 This is not displayed when a movie is selected.

### Displaying the menu guide

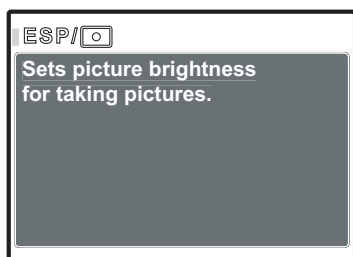


With menu or function item highlighted, hold down DISP./ to display the menu guide. Release DISP./ to close the menu guide.

### Checking the time

While the camera is off, press DISP./ to display the time (and alarm set time when [ALARM CLOCK] is set). The time will be displayed for 3 seconds.

# Menu operations

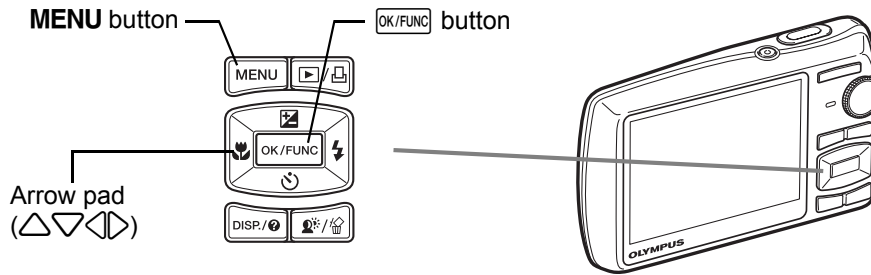


## About the menus

Pressing **MENU** displays the top menu on the monitor.

- The items displayed on the top menu differ according to the mode.


Top menu (in still picture shooting mode)

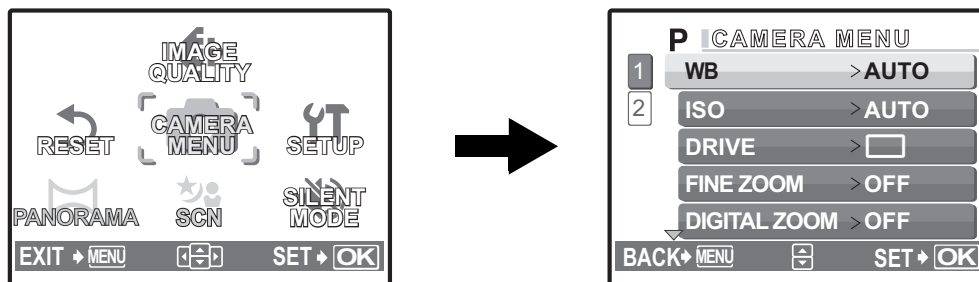

- When [CAMERA MENU], [PLAYBACK MENU], [EDIT], [ERASE], or [SETUP] is selected, the menu corresponding to the respective functions is displayed.
- When your camera is set, following the shooting guide displayed, with the mode dial set at **GUIDE**, press **MENU** to display the shooting guide screen.

## Operation guide

During menu operations, the buttons and their respective functions are displayed at the bottom of the monitor. Follow these guides to navigate the menus.

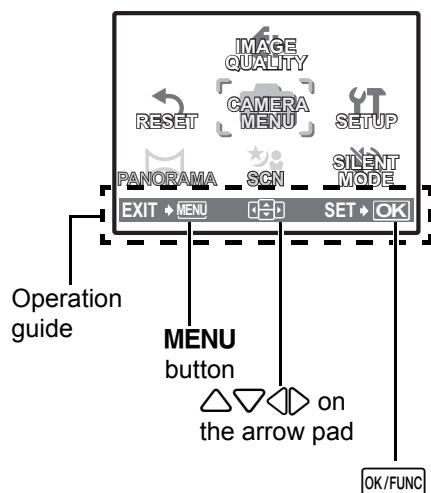

**BACK → MENU** : Returns to the previous menu.




**EXIT → MENU** : Exits the menu.

**[Arrow pad]** : Press  $\triangle$   $\nabla$   $\leftarrow$   $\rightarrow$  to select a setting.






**SET → OK** : Sets the selected item.

## Using the menus



 

This explains how to use the menu with the [AF MODE] setting as an example.




- 1 Set the mode dial to .
- 2 Press **MENU** to display the top menu. Select **[CAMERA MENU]** and press  to confirm your selection.
  - [AF MODE] is one of the selections on the [CAMERA MENU]. Press  to confirm your selection.

- 3 Use the arrow pad   to select **[AF MODE]**, and press .


- Some settings may not be available, depending on the shooting/scene mode.
- When pressing  on this screen, the cursor moves to the page display. Press   to change the page. To select an item or function, press  or .


Page display: \_\_\_\_\_  
The page display mark is displayed when there are additional menu items on the next page.

- 4 Use the arrow pad   to select **[FACE DETECT]**, **[iESP]** or **[SPOT]**, and press .
- The menu item is set and the previous menu is displayed. Press **MENU** repeatedly to exit the menu.
- To cancel changes and continue menu operation, press **MENU** before pressing .

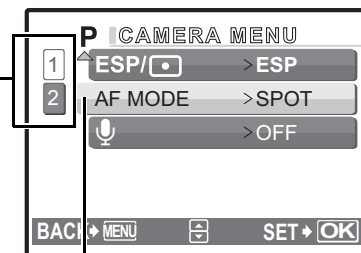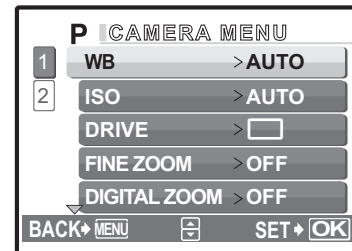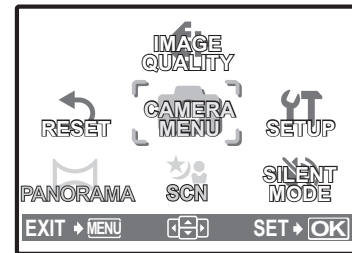

The selected item is displayed in a different color.

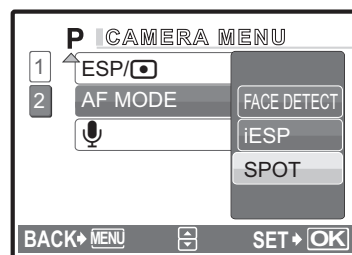

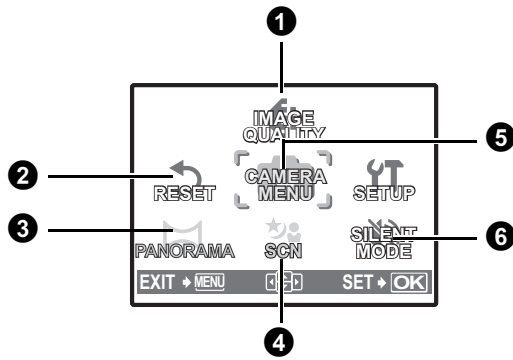

## 5 CAMERA MENU

WB	ESP/☐
ISO	AF MODE
DRIVE	☐
FINE ZOOM	DIS MOVIE MODE*
DIGITAL ZOOM	

\* This is displayed only when the movie is selected.

- Some functions are not available in certain modes.
- ☞ “Functions available in shooting modes and scene modes” (P. 62)
- ☞ “SETUP menus” (P. 34)
- The factory default settings are displayed in gray (   ).

## 1 IMAGE QUALITY

### Changing the image quality

#### Still picture image quality and their applications

Image quality/Image size	Compression	Application
SHQ 3264 × 2448	Low compression	• This is useful for printing large images on A3-size (16.5 × 11.7 in.) paper.
HQ 3264 × 2448	Standard compression	• This is useful for performing computer image processing, such as contrast adjustment and red-eye correction.
SQ1 2560 × 1920 2304 × 1728 2048 × 1536	Standard compression	• This is useful for A3 (16.5 × 11.7 in.) /A4 (11.7 × 8.5 in.)-size prints. • This is useful for computer editing such as rotating or adding text to a picture.
SQ2 1600 × 1200 1280 × 960 1024 × 768 640 × 480	Standard compression   Low compression	• This is useful for postcard-sized (6 × 4 in.) prints. • This is useful for viewing pictures on a computer.  • This is useful for sending as e-mail attachments.
16:9 1920 × 1080	Standard compression	• This is useful for expressing the broadness of a subject such as landscapes and for viewing pictures on a wide-screen television. • [PANORAMA] cannot be set.

#### Movie image quality

Image quality/Image size
SHQ 640 × 480
HQ 320 × 240
SQ 160 × 120

## 2 RESET








### Restoring default settings

NO /YES

It restores shooting functions back to default settings. The mode dial must not be set to

### GUIDE.

#### Functions restored to the factory default settings

Function	Factory default setting	Ref. Page
P/AUTO	P	P. 14
	0.0	P. 16
	AUTO	P. 16
	 OFF	P. 16
	OFF	P. 16
Shadow Adjustment Technology	OFF	P. 17
Information Display	Normal Display	P. 18
IMAGE QUALITY	HQ	P. 21
PANORAMA	COMBINE IN CAMERA 1	P. 22
<b>SCN</b>	PORTRAIT	P. 24
WB	AUTO	P. 25
ISO	AUTO	P. 25
DRIVE	<input type="checkbox"/>	P. 26
FINE ZOOM	OFF	P. 26
DIGITAL ZOOM	OFF	P. 26
ESP/ 	ESP	P. 26
AF MODE	SPOT	P. 27
	OFF	P. 27
DIS MOVIE MODE	OFF	P. 27

## 3 PANORAMA


### Taking and combining panoramic pictures

COMBINE IN CAMERA1	Automatically shoots and combines pictures in the camera.
COMBINE IN CAMERA2	Manually shoots and automatically combines pictures in the camera.
COMBINE IN PC	Manually shoots pictures that are to be combined on a PC.

- An Olympus xD-Picture Card is required for shooting.
- When the card capacity is insufficient, this function cannot be selected.

## [COMBINE IN CAMERA 1]


Take pictures automatically for a panoramic picture and combine the pictures for a single panoramic picture using your camera. Only combined pictures are saved.

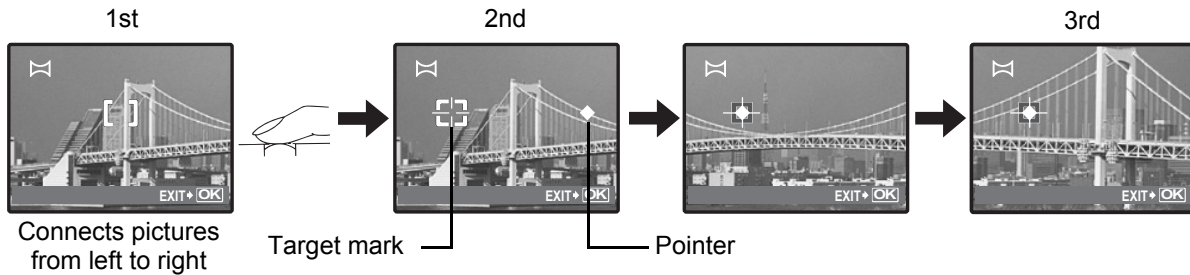

- Take the first picture.
- When you slightly move the camera in the direction of the next picture, a target mark and a pointer appear.
- The pointer moves as you pan the camera. Move the camera slowly and steadily until the pointer overlaps the target mark, then stay still.
- The camera shoots the second picture automatically.
- After the current subject appears on the monitor, take the third picture in the same manner as the second one.
- After the third picture is taken, the pictures are automatically combined, and then the combined picture is displayed. To combine only two pictures, press **[OK/FUNC]** before shooting the third picture.

## [COMBINE IN CAMERA 2]


Take pictures manually for a panoramic picture and combine the pictures for a single panoramic picture using your camera. Only combined pictures are saved.

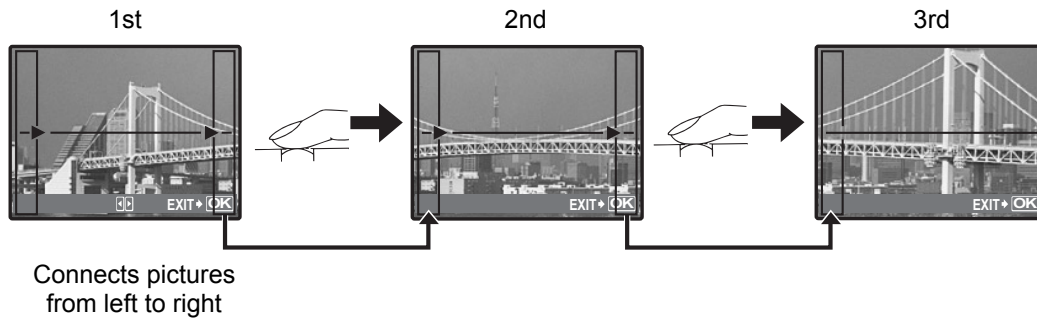

- Use **[◀▶]** to specify at which edge you want to connect the pictures, and then take the first picture.
- Compose your second shots so that the edge of the first picture overlaps the edge of the second picture, then shoot.
- Take the third picture in the same manner as the second one.
- After the third picture is taken, the pictures are automatically combined, and then the combined picture is displayed. To combine only two pictures, press **[OK/FUNC]** before shooting the third picture.

## [COMBINE IN PC]


Create a panoramic picture using the OLYMPUS Master software from the provided CD-ROM.

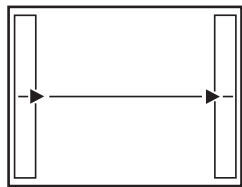

Connects pictures from left to right

▷: The next picture is connected at the right edge.

◁: The next picture is connected at the left edge.

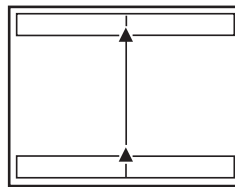

Connects pictures from bottom to top

△: The next picture is connected at the top.

▽: The next picture is connected at the bottom.

Use the arrow pad to specify at which edge you want to connect the pictures, and then compose your shots so that the edges of the pictures overlap.

Shooting is possible for up to 10 pictures. Press **OK/FUNC** to exit panorama shooting.

- In [COMBINE IN PC] the previous picture for positioning does not remain. Remember the frame displayed on the monitor as a rough indication, then compose the shot so that the edges of the previous picture in the frame overlap with the next shot.

### ! Note

- Focus, exposure, WB and zoom are locked in the first frame, and the flash does not fire.
- In [COMBINE IN CAMERA1] or [COMBINE IN CAMERA2] mode, [IMAGE QUALITY] cannot be changed.
- In [COMBINE IN CAMERA1] mode, camera settings are automatically optimized for this mode. In [COMBINE IN CAMERA2] or [COMBINE IN PC] mode, pictures are taken in the last [ISO] or [SCN] settings set (except for some scene modes).

## 4 SCN (Scene)

Selecting a scene mode according to the shooting situation

PORTRAIT / LANDSCAPE / LANDSCAPE+PORTRAIT / NIGHT SCENE\*<sup>1</sup> /  
NIGHT+PORTRAIT\*<sup>1</sup> / SPORT / INDOOR / CANDLE / SELF PORTRAIT /  
AVAILABLE LIGHT / SUNSET\*<sup>1</sup> / FIREWORKS\*<sup>1</sup> / CUISINE / BEHIND GLASS /  
DOCUMENTS / AUCTION\*<sup>2</sup> / SHOOT & SELECT1\*<sup>2</sup> / SHOOT & SELECT2\*<sup>3</sup> / SMILE SHOT\*<sup>2</sup> /  
BEACH & SNOW

The scene mode selection screen displays sample images as well as a description of the shooting situation for which it is designed. It can be set only when the mode dial is set to **SCN**.

☞ “Mode dial Switching between shooting and playback modes” (P. 12)


- By switching to another scene mode, most settings will be changed to the default settings of each scene mode.

\*1 When the subject is dark, noise reduction is automatically activated. This approximately doubles the shooting time, during which no other pictures can be taken.

\*2 The focus is locked at the first frame.

\*3 The camera focuses for each frame.


Scene mode selection screen

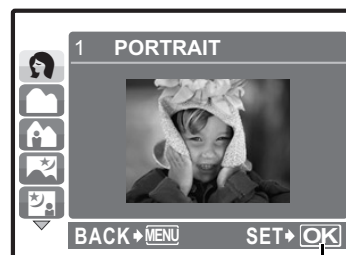

Set the scene mode.

## [ SHOOT & SELECT1]/[ SHOOT & SELECT2]

- These scene modes allow you to take sequential pictures by holding down the shutter button. After shooting the pictures, select the ones you want to erase by marking them with a ✓ and press to erase them.

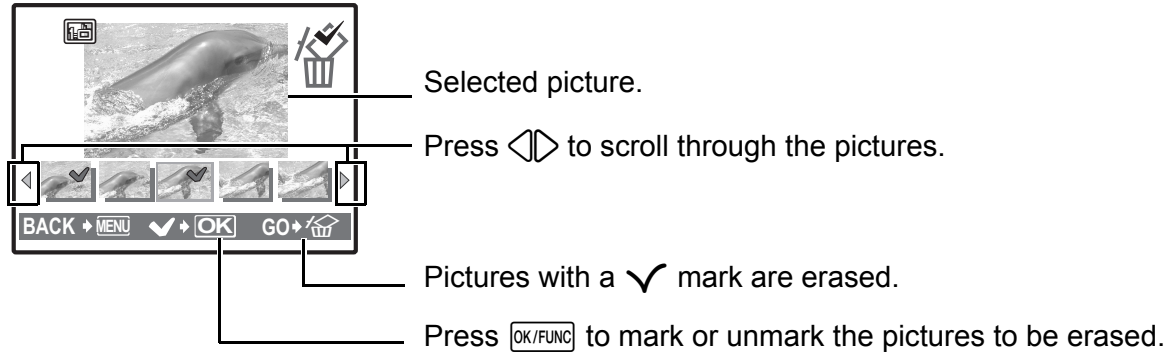

## [ SMILE SHOT]

When the camera detects a smiling face in shooting standby mode, 3 frames are taken in high speed sequential shooting mode automatically. You can also shoot pictures manually by pressing the shutter button in this mode.

- When [SMILE SHOT] is selected, the self-timer lamp lights. Shooting is not available while the self-timer lamp is blinking.
- There may be cases in which the camera cannot detect a smiling face.

## 5 CAMERA MENU

**WB** ..... **Adjusting the color of a picture**



	AUTO	The white balance is adjusted automatically for natural color, regardless of the light source.
	Sunny day	For shooting under a clear sky.
	Cloudy day	For shooting under a cloudy sky.
	Tungsten light	For shooting under tungsten lighting.
	Fluorescent lamp 1	For shooting under daylight fluorescent lighting. (This type of lamp is mainly used in homes.)
	Fluorescent lamp 2	For shooting under a neutral white fluorescent lamp. (This type of lamp is mainly used in desk lamps.)
	Fluorescent lamp 3	For shooting under a white fluorescent lamp. (This type of lamp is mainly used in offices.)

**ISO** ..... **Changing the ISO sensitivity**




	AUTO	Sensitivity is automatically adjusted according to the conditions of the subject.
	50/100/200/400/ 800/1600/3200	A low value lowers the sensitivity for daylight shooting of clear, sharp pictures. The higher the value, the better the camera's light sensitivity and ability to shoot with a fast shutter speed and in low light conditions. However, high sensitivity introduces noise into the resulting picture, which may give it a grainy appearance.

- When [DRIVE] is set to [], [ISO] is fixed at [AUTO].
- When [3200] is selected, [IMAGE QUALITY] is limited to [2048 × 1536] or lower.

**DRIVE**..... Using sequential (continuous) shooting

	Shoots 1 frame at a time when the shutter button is pressed.
	Focus and exposure are locked at the first frame. The sequential shooting speed varies depending on the image quality setting.

You can take a sequence of pictures at one time by holding down the shutter button. The camera will take pictures continuously until you release the shutter button.

- When  is selected, the following setting restrictions apply.
  - The flash mode is fixed at .
  - [ISO] is fixed at [AUTO].
  - [IMAGE QUALITY] is limited to [2048 × 1536] or lower.
  - [FINE ZOOM], [DIGITAL ZOOM], and  cannot be set.

**FINE ZOOM**..... Zooming in on your subject without reducing image quality

OFF / ON

Combines optical zoom and image capture to enable greater magnification (maximum of 16x). There is no deterioration in the image quality since data conversion (by increasing pixel resolution) is not performed.

- The available [IMAGE QUALITY] setting is [SQ1] or lower.
- The available magnification varies depending on the [IMAGE QUALITY] setting.
- This function is not available with Digital Zoom activated.


**DIGITAL ZOOM**..... Zooming in on your subject

OFF / ON



The digital zoom can be used to take close-up shots with stronger magnification when combined with optical zoom. (Optical Zoom × Digital Zoom: maximum 28×)

- This function is not available with Fine Zoom activated.

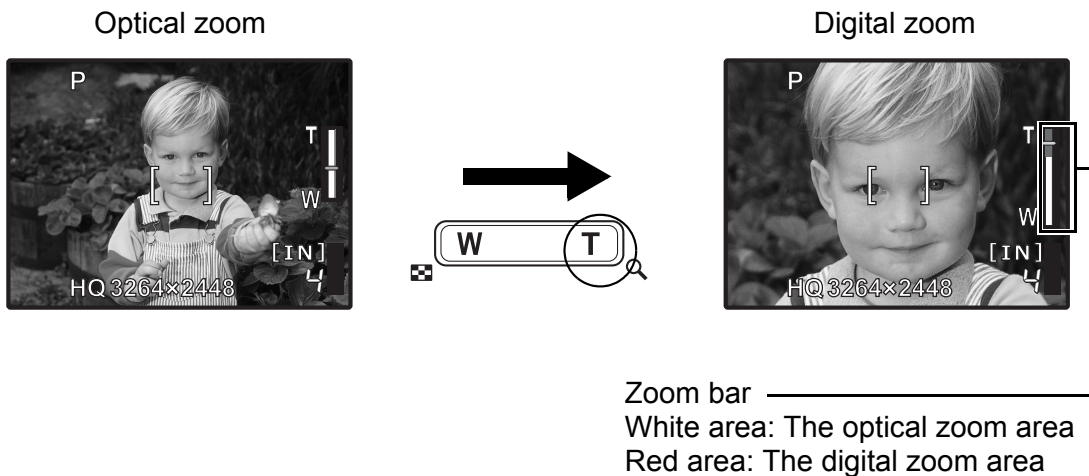Menu operations



**ESP**/..... Changing the area for measuring the brightness of a subject

	Meters the brightness at the center of the monitor and the surrounding area separately to capture an image with balanced brightness. When taking pictures against strong backlight, the center of the picture may appear dark.
	Only the center of the monitor is metered. Recommended for taking a picture against strong backlight.

## AF MODE ..... Changing the focusing area

FACE DETECT	The camera searches a face within the frame and focus on it.
iESP	The camera determines which subject within the screen to focus on. Even when the subject is not in the center of the screen, focusing is possible.
SPOT	Focus selection is based on the subject within the AF target mark.

- There may be cases in which the camera cannot focus on a face even if [FACE DETECT] is selected.

## ..... Recording sound with still pictures

OFF /ON

When activated [ON], the camera will record about 4 seconds of audio after the picture is taken.

When recording, aim the camera microphone at the source of the sound you want to record.

## DIS MOVIE MODE ..... Shooting in digital image stabilization movie mode

OFF /ON

Recording movies with digital image stabilization.

- When set to [ON], images will appear slightly magnified.
- Images may not be correctable if the camera is severely shaken or the subject's motion is excessive.
- Select [OFF] when recording movie with the camera physically stabilized. If not, the movie you are capturing may shake along with the subject.

## 6 SILENT MODE



Turning off camera sounds

OFF /ON

This function allows you to turn off operational sounds that occur during shooting and playback, warning beeps, shutter sounds, etc.



When a still picture is selected

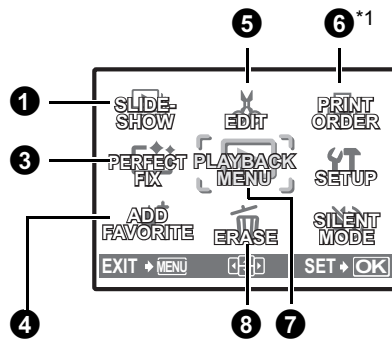
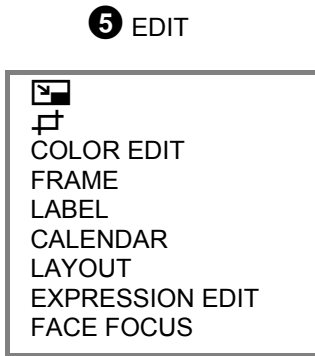


**7** PLAYBACK MENU



\*1 A card is required.  
\*2 This is not displayed when a movie is selected.

When a movie is selected

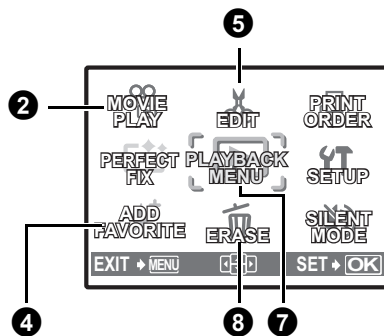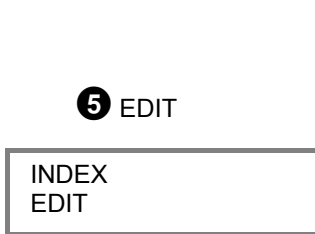


☞ “SETUP menus” (P. 34)  
“SILENT MODE Turning off camera sounds” (P. 27)

- The factory default settings are displayed in gray ( ).

## 1 SLIDESHOW

Playing back pictures automatically

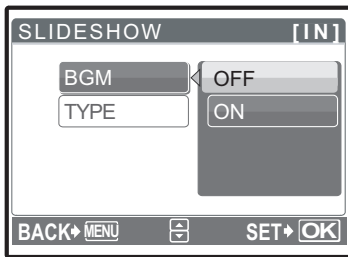

- Set [BGM] to [ON] or [OFF].
- Select the transition effect between pictures from [TYPE].

BGM	ON / OFF
TYPE	NORMAL / SCROLL / FADER / SLIDE / ZOOM DOWN / ZOOM UP / CHECKERBOARD / BLINDS / SWIVEL / RANDOM

- Only the first frame of each movie is displayed.
- After setting [BGM] and [TYPE], press **OK/FUNC** to start the slideshow.
- Press **OK/FUNC** or **MENU** to cancel the slideshow.

## 2 MOVIE PLAY

Playing back movies

Select [MOVIE PLAY] from the top menu, and press **OK/FUNC** to play back the movie.



- You can also playback a movie by selecting a picture with the movie icon ( ) in playback mode and pressing **OK/FUNC**.

## Operations during movie playback



Playing time/Total recording time

△: Increases the volume.

▽: Reduces the volume.

▷: Each time you press the button, the playback speed changes in the following order: 2×; 20×; and back to 1×.

◁: Plays the movie in reverse. Each time you press the button, the playback speed changes in the following order: 1×; 2×; 20×; and back to 1×.

- Press **OK/FUNC** to pause the playback.

## Operations during pause



△: Displays the first frame.

▽: Displays the last frame.

▷: Displays the next frame.

◁: Displays the previous frame.


- To resume the movie, press **OK/FUNC**.
- To cancel the playback of the movie in the middle of it or during pause, press **MENU**.

## 3 PERFECT FIX

### Correcting pictures

The recorded image is corrected and saved as a new one.

- Use △▽ to select the effect you want to apply, and press **OK/FUNC**.
- Use ◀▶ to select the picture you want to edit, and press **OK/FUNC**.

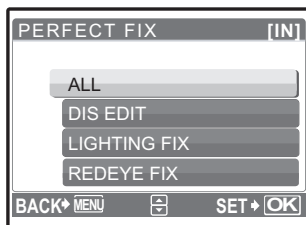


ALL	Digital image stabilization edit, lighting fix and redeye fix are activated together.
DIS EDIT	Retouches unanticipated blurry images.
LIGHTING FIX	The underexposed areas of an image are brightened.
REDEYE FIX	Corrects a subject with red-eye.

- Movies, pictures shot by another camera, and previously fixed or edited pictures cannot be corrected.
- When fixed pictures are displayed, the picture cannot be fixed.
- Some blur may be left on some pictures.
- Editing an image may cause it to suffer a minor loss in quality.

## 4 ADD FAVORITE

## Adding favorite images


This function registers your favorite still pictures in the internal memory as separate still pictures. You can register up to 9 favorite pictures.

 "P Viewing "My Favorite"" (P. 13)



- Use the arrow pad to select a picture, and press **OK/FUNC**.

- Registered pictures cannot be erased even by formatting the internal memory.
- A registered picture can be used as the startup screen picture or menu screen background picture.

 "PW ON SETUP Setting the startup screen and volume" (P. 35)

"MENU THEME Setting the menu screen color and background" (P. 35)

### Note

- Registered pictures cannot be edited, printed, copied to a card, transferred to a computer, or played back on a computer.

## 5 EDIT



### ..... Changing the size of pictures

640 × 480 / 320 × 240

This changes the image size of a picture and saves it as a new file.




### ..... Cropping a picture

Crop a picture, and save the cropped picture as a new picture.



- Use **◀▶** to select a picture to be cropped and press **OK/FUNC**.
- Use the arrow pad and zoom button to adjust the position and size of the area-selection box, and press **OK/FUNC**.

## COLOR EDIT ..... Changing the coloring of the picture

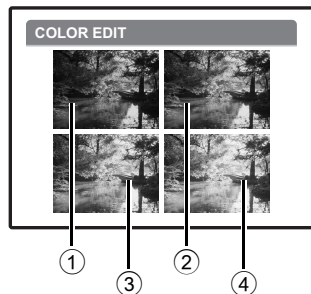

This function lets you change the coloring of the picture and save it as a new picture.


• Select the picture with **◀▶**, and press **OK/FUNC**.

• Select your desired effect with **◀▶**, and press **OK/FUNC**.

- |                     |  |
|---------------------|--|
| ① BLACK & WHITE     | This changes the picture to black and white.           |
| ② SEPIA             | This changes the picture to sepia.                     |
| ③ SATURATION (HARD) | This increases the saturation of the picture.          |
| ④ SATURATION (SOFT) | This slightly increases the saturation of the picture. |

## FRAME.....Adding frames to pictures

This function lets you select a frame, integrate the frame with an image, and save it as a new picture.

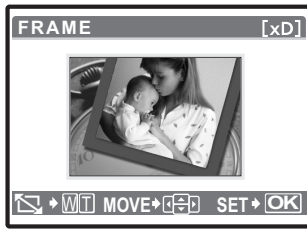

- Select a frame with  $\leftarrow \rightarrow$  and press  $\boxed{\text{OK/FUNC}}$ .
- Select the picture to be integrated with the frame with  $\leftarrow \rightarrow$ , and press  $\boxed{\text{OK/FUNC}}$ . (Press  $\triangle \nabla$  to turn the picture 90 degrees clockwise or 90 degrees counterclockwise.)
- Press the arrow pad and the zoom button to adjust the position and size of the picture, and press  $\boxed{\text{OK/FUNC}}$ .

## LABEL.....Add a label to your picture


This function lets you select a label, integrate the label with an image, and save it as a new picture.



- Select the picture with  $\leftarrow \rightarrow$ , and press  $\boxed{\text{OK/FUNC}}$ .
- Select the label with  $\leftarrow \rightarrow$ , and press  $\boxed{\text{OK/FUNC}}$ . (Press  $\triangle \nabla$  to turn the label 90 degrees clockwise or 90 degrees counterclockwise.)
- Press the arrow pad and the zoom button to adjust the position and size of the label, and press  $\boxed{\text{OK/FUNC}}$ .
- Set the color of the label with the arrow pad, and press  $\boxed{\text{OK/FUNC}}$ .

## CALENDAR ..... Create a calendar print with a picture


This function lets you select a calendar format, integrate the calendar with a picture, and save it as a new file.

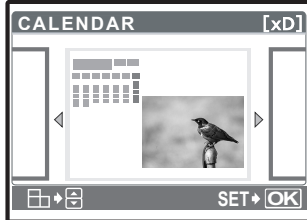

- Select the picture with  $\leftarrow \rightarrow$ , and press  $\boxed{\text{OK/FUNC}}$ .
- Select the calendar with  $\leftarrow \rightarrow$ , and press  $\boxed{\text{OK/FUNC}}$ . (Press  $\triangle \nabla$  to turn the picture 90 degrees clockwise or 90 degrees counterclockwise.)
- Set the date of the calendar, and press  $\boxed{\text{OK/FUNC}}$ .

## LAYOUT ..... Arranging and integrating multiple pictures



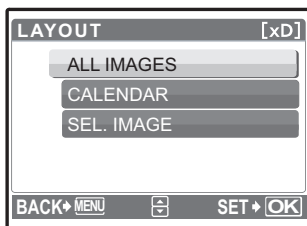

ALL IMAGES	Arranges and integrates all pictures saved in the card.
CALENDAR	Selects pictures stored on a day from the calendar displayed to arrange and integrate.
SEL. IMAGE	Selects pictures individually to arrange and integrate.



- Use  $\leftarrow \rightarrow$  to select a layout pattern and press  $\boxed{\text{OK/FUNC}}$ .
- Select the image selection method and press  $\boxed{\text{OK/FUNC}}$ .
- Select the picture and press  $\boxed{\text{OK/FUNC}}$ . (When [SEL. IMAGE] is selected, press  $\triangle \nabla$  to turn the picture 90 degrees clockwise or 90 degrees counterclockwise.)



## EXPRESSION EDIT ..... Editing facial expression

This function lets you alter your subject's facial expression to create an entirely new picture. This feature is applicable on the largest and/or closest face in the frame. The subject must be facing towards the camera.

- Select the picture with , and press .
- Select your desired effect with , and press .
- There may be cases in which the camera cannot detect a face.

## FACE FOCUS ..... Highlighting a face in the picture





Your subject's face will be sharp and in focus, and the background will appear soft and out of focus. This feature is applicable on the largest and/or closest face in the frame. The subject must be facing towards the camera.

- Select the picture with , and press .
- There may be cases in which the camera cannot detect a face.

## INDEX ..... Making an index picture from a movie

This function extracts 9 frames from a movie and saves them as a new picture (INDEX) containing thumbnails of each frame.






- Use  to select a movie and press .
- Use the arrow pad to select the first frame and press . Select the last frame in the same way and press .

## EDIT ..... Cutting a part of the movie

Select a part of the movie you wish to save, overwrite the original file with it, or save it as a new file.



- Select [NEW FILE] or [OVERWRITE] and press .
- Use the arrow pad to select the first frame and press . Select the last frame in the same way and press .

## 6 PRINT ORDER

### Making print reservations (DPOF)

This function allows you to save printing data (the number of prints and the date and time information) with the pictures stored on the card.

 "Print settings (DPOF)" (P. 42)

## 7 PLAYBACK MENU

### 🔑 .....Protecting pictures

OFF /ON




Protected pictures cannot be erased with [ERASE], [SEL.IMAGE], or [ALL ERASE], but they are all erased by formatting.

- Select the picture with  $\triangleleft$ / $\triangleright$ , and protect it by selecting [ON] with  $\triangleup$ / $\triangledown$ . You can protect several frames in succession.  $\text{🔑}$  is displayed when the picture is protected.

### 🔄 .....Rotating pictures

+90° / 0° /-90°

Pictures taken with the camera held vertically are displayed horizontally during playback. This function lets you rotate such pictures so that they are displayed vertically on the monitor, and the new picture orientations will be saved even after the power is turned off.

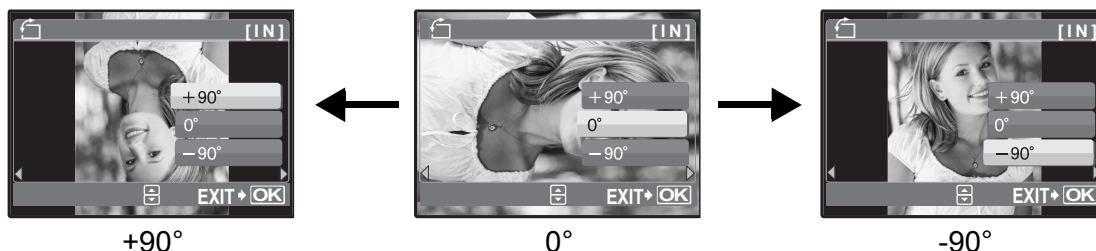

Select a picture with  $\triangleleft$ / $\triangleright$ , and use  $\triangleup$ / $\triangledown$  to select [+90°], [0°], or [-90°]. You can rotate several frames in succession.

### 🎤 .....Adding sound to still pictures

YES /NO



Sound is recorded for about 4 seconds.

- Select a picture with  $\triangleleft$ / $\triangleright$ , and use  $\triangleup$ / $\triangledown$  to select [YES] to begin recording.
- The [BUSY] bar will be temporarily displayed.

## 8 ERASE

### Erase selected pictures/Erase all pictures

Protected pictures cannot be erased. Cancel protection before erasing protected pictures. Once erased, pictures cannot be restored. Check each picture before erasing to avoid accidentally erasing pictures you want to keep.

- When erasing the picture in the internal memory, do not insert the card into the camera.
- When erasing the picture from the card, insert a card into the camera in advance.

**SEL. IMAGE**..... Erase by selecting the single-frame




- Use the arrow pad to select the picture, and press **[OK/FUNC]** to add ✓.
- Press **[OK/FUNC]** again to cancel the selection.
- When all individual pictures to be erased have been marked, press **[INFO/HELP]**.
- Select **[YES]**, and press **[OK/FUNC]**.

**ALL ERASE** ..... Erase all the pictures in the internal memory or the card


- Select **[YES]**, and press **[OK/FUNC]**.

**SETUP** menus


Shooting mode

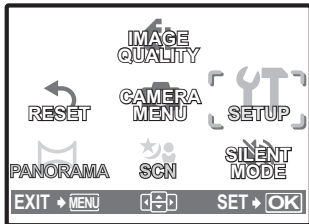

Playback mode

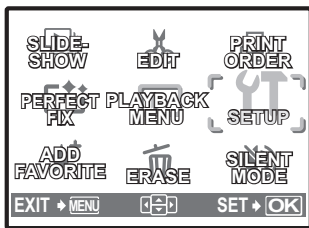

SETUP

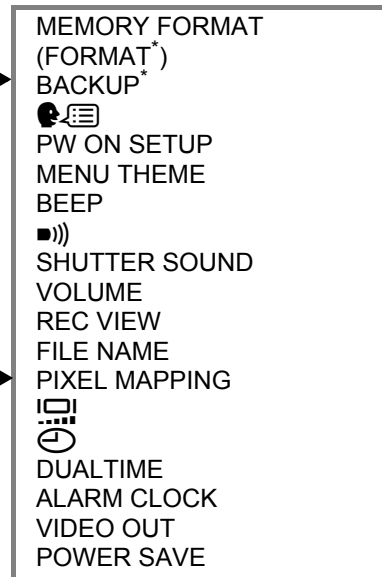

\* A card is required.

Menu operations

**MEMORY FORMAT (FORMAT)**..... Formatting the internal memory or card

All existing data, including protected pictures, are erased when the internal memory or card is formatted (images registered to “My Favorite” are not erased). Make sure that you save or transfer important data to a computer before formatting the internal memory or card.

- Make sure there is no card inserted in the camera when formatting the internal memory.
- Be sure that the card is inserted in the camera when formatting the card.
- Before using non-Olympus cards or cards which have been formatted on a computer, you must format them with this camera.

**BACKUP** ..... Copying pictures in the internal memory to the card

Insert the optional card into the camera. Copying data does not erase the pictures in the internal memory.

- It takes some time to back up data. Check that the battery is charged before starting the copy, or use the AC adapter.

 ..... **Selecting a display language**

You can select a language for on-screen display. Available languages vary depending on where you purchased this camera.  
You can add other languages to your camera with the provided OLYMPUS Master software.

**PW ON SETUP** ..... **Setting the startup screen and volume**

SCREEN OFF (No picture is displayed.) / 1 / 2 / MY FAVORITE

VOLUME OFF (No sound) / LOW / HIGH

- Select [2] and press  $\triangleright$  to set a still picture in the internal memory or card as the startup screen.
- Select [MY FAVORITE] and press  $\triangleright$  to set a still picture registered in “My Favorite” as the startup screen.
- ☞ “ADD FAVORITE Adding favorite images” (P. 30)
- [VOLUME] cannot be set in the following cases.
  - When [SCREEN] is set to [OFF]
  - When [SILENT MODE] is set to [ON]

**MENU THEME** ..... **Setting the menu screen color and background**

NORMAL / BLUE / BLACK / PINK / MY FAVORITE

- Select [MY FAVORITE] and press  $\triangleright$  to set a still picture registered in “My Favorite” as the background.
- ☞ “ADD FAVORITE Adding favorite images” (P. 30)

**BEEP** ..... **Adjusting the volume of the beep when buttons are pressed**

OFF (No sound) / LOW / HIGH

**■)))** ..... **Adjusting the volume of the camera warning sound**

OFF (No sound) / LOW / HIGH

**SHUTTER SOUND** ..... **Selecting the sound of the shutter button**

OFF (No sound)

1 LOW / HIGH

2 LOW / HIGH

3 LOW / HIGH

**VOLUME** ..... **Adjusting the volume during playback**

OFF (No sound) / 1 / 2 / 3 / 4 / 5


**REC VIEW** ..... **Viewing pictures immediately after they are taken**

OFF	The picture being recorded is not displayed. This is useful when you want to prepare for your next shot while the previous picture is being recorded.
ON	The picture being recorded is displayed. This is useful for making a brief check of the picture you have just taken. You can resume shooting while the picture is still being displayed.

**FILE NAME** ..... **Resetting the file names of pictures**

RESET	This method is useful when grouping files on separate cards. The file number and folder number are reset every time a new card is inserted in the camera. The folder number returns to [No. 100] and the file number returns to [No. 0001].
AUTO	This method is useful when you want to manage all your files with sequential numbers. Even if a new card is inserted, the folder number and file number are retained from the previous card. This helps you to manage multiple cards.

File names and their folder names for recorded pictures are automatically generated by the camera. File names and folder names respectively include file numbers (0001 to 9999) and folder names (100 to 999), and are named as follows.

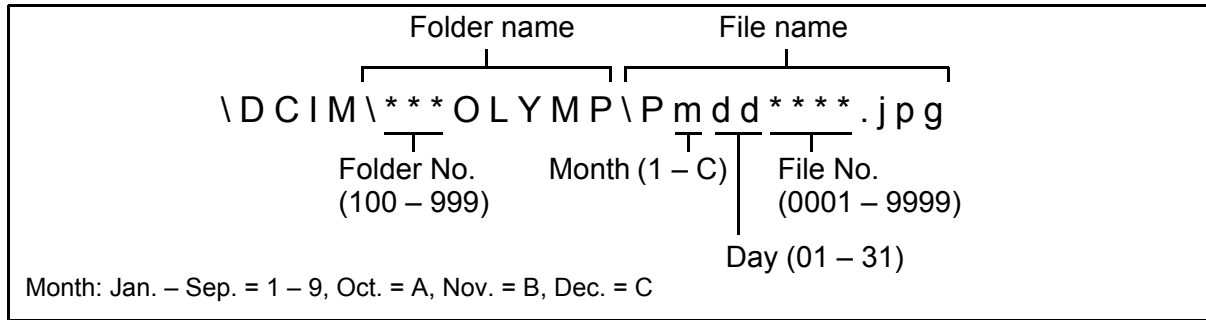

**PIXEL MAPPING** ..... **Adjusting the image processing function**

The pixel mapping feature allows the camera to check and adjust the CCD and image processing functions. It is not necessary to operate this function frequently. Approximately once a year is recommended. Wait at least one minute after taking or viewing pictures to allow the pixel mapping function to perform properly. If you turn the camera off during pixel mapping, start again.

Select [PIXEL MAPPING]. When [START] is displayed, press **OK/FUNC**.

**Adjusting the brightness of monitor**




△: Brightens the monitor. ▽: Darkens the monitor.

Press **OK/FUNC** to confirm your selection.

**Setting the date and time**


The date and time is saved with each image, and is used in the file name.

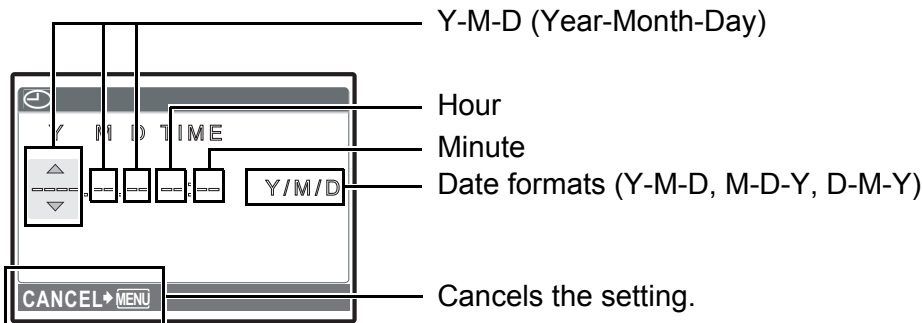

- The first two digits of the year are fixed.
- The time is displayed in the 24-hour format.
- To set the time precisely, with the cursor at either “minute” or [Y/M/D], press **[OK/FUNC]** as the time signal strikes 00 seconds.

**DUALTIME** ..... **Setting the date and time for another time zone**

OFF	Switches to the date and time set in [⌚]. Pictures are recorded with the date and time set in [⌚].
ON	Switches to the date and time set in [DUALTIME]. When setting the dual time, select [ON], and then set the time. Pictures are recorded with the date and time set in [DUALTIME].

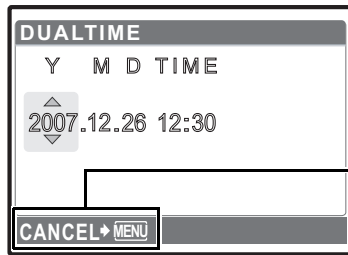

**MENU:** Cancels the setting.


- The date format is the same as that set with [⌚].
- The first two digits of the year are fixed.
- The time is displayed in the 24-hour format

**ALARM CLOCK** ..... **Setting alarms**

OFF	No alarm is set or alarm is canceled.
ONE TIME	Alarm is activated once. After the alarm goes off, the setting is canceled.
DAILY	Alarm is activated daily at the set time.

- When [⌚] has not been set, [ALARM CLOCK] is not available.
- When [SILENT MODE] is set to [ON], the alarm will not sound.
- When [DUALTIME] is set to [ON], the alarm sounds according to the dual time date and time setting.

**Setting an alarm**

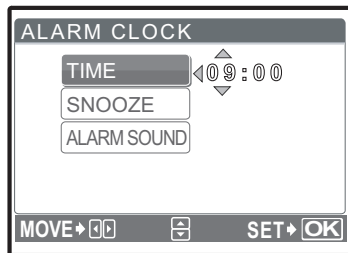

- Select [ONE TIME] or [DAILY], and set the alarm time.
- You can set snooze or alarm sounds and volume.

TIME	Sets the alarm time.	
SNOOZE	OFF	No snooze is set.
	ON	Alarm is activated every 5 minutes, up to 7 times.
ALARM SOUND	1	LOW / MID / HIGH
	2	LOW / MID / HIGH
	3	LOW / MID / HIGH

## Operating, shutting off and checking the alarm

- Operating the alarm:  
Turn off the camera. The alarm only operates when the camera is off.
- Shutting off the alarm:  
While the alarm is sounding, press any button to shut off the alarm and turn off the camera. Note that pressing **POWER** will turn the camera on.  
When [SNOOZE] is [OFF], the alarm stops automatically and the camera turns off after 1 minute of no operation.
- Checking the alarm settings:  
While the camera is off, press **DISP./?** to display the current and alarm set times. Times will be displayed for 3 seconds.

## VIDEO OUT .....Playing back pictures on a TV

NTSC / PAL

The factory default settings differ according to the region where the camera is sold.

To play back camera images on a TV, set the video output according to your TV's video signal type.


- TV video signal types differ by country/region. Check the video signal type before connecting the camera to the TV.

NTSC: North America, Taiwan, Korea, Japan

PAL: European countries, China

### Playing back pictures on a TV

Turn off the camera and the TV before connecting.

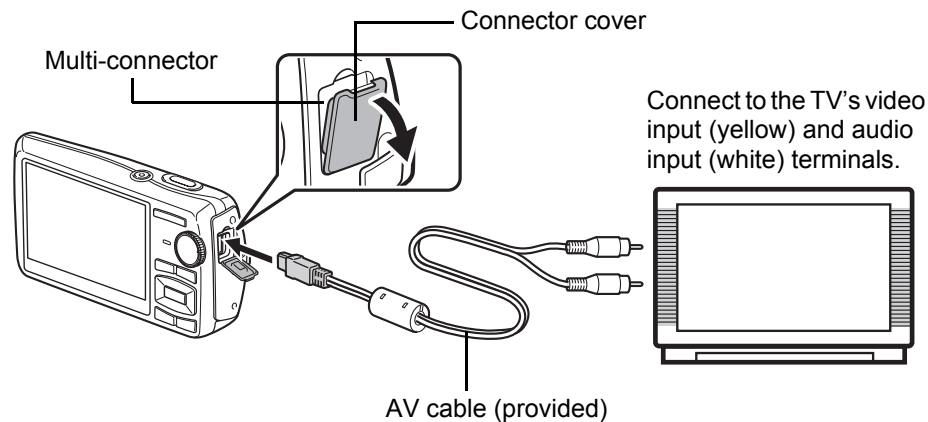

### Settings on the camera

Press **POWER** in playback mode to turn the camera on.

- The last picture taken is displayed on the TV. Use the arrow pad to select the picture you want to display.

### Settings on the TV

Turn the TV on, and set it to video input mode.

- For details of switching to video input, refer to your TV's instruction manual.
- Images and the information displayed on the screen may become cropped depending on the TV's settings.

## POWER SAVE ..... Setting the camera to the power save mode

OFF / ON

When no operation has been performed for approximately 10 seconds while in shooting mode, the monitor automatically shuts off. Pressing the zoom button or other buttons restores the camera from power save mode.

# Printing pictures

## Direct printing (PictBridge)

### Using the direct printing function

By connecting the camera to a PictBridge-compatible printer, you can print out pictures directly. Select the pictures you want to print and the number of prints on the camera's monitor. To find out if your printer is compatible with PictBridge, refer to the printer's instruction manual.

#### What is PictBridge?

A standard for connecting digital cameras and printers of different makers and printing out pictures directly.

- Available printing modes, paper sizes, etc., vary depending on the printer you use. Refer to the instruction manual for your printer.
- For details of printing paper types, ink cassettes, etc., refer to the printer's instruction manual.

## EASY PRINT


[EASY PRINT] can be used to print out the picture displayed on the monitor.

The selected picture is printed using the standard settings of your printer. The date and file name are not printed.

#### STANDARD

All printers that support PictBridge have standard print settings. If [STANDARD] is selected on the settings screens (P. 41), pictures are printed according to these settings. Refer to the printer's instruction manual for its standard settings or contact the printer manufacturer.

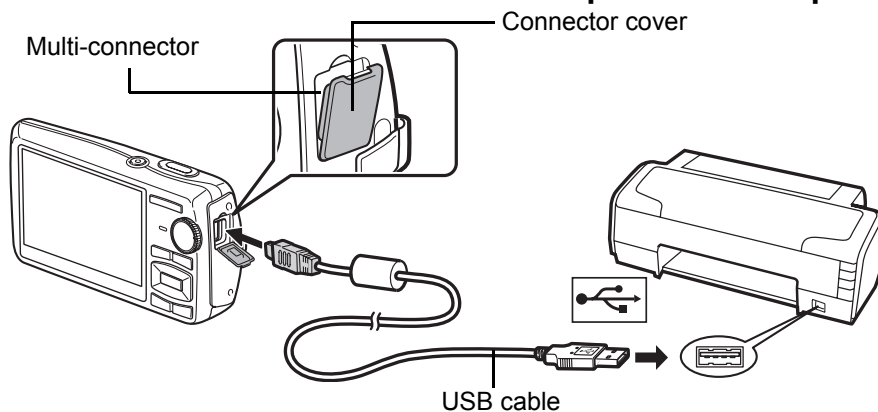


- 1 In playback mode, display the picture you want to print out on the monitor.**
- 2 Turn the printer on and plug the USB cable provided with the camera into the multi-connector of the camera and the printer's USB port.**



- The easy print start screen is displayed.
- For details of how to turn the printer on and the location of the USB port, refer to the printer's instruction manual.


### 3 Press / .

 - Printing starts.


- When printing is finished, the picture selection screen is displayed. To print another picture, press  to select a picture, and press / .
- When you are finished, disconnect the USB cable from the camera with the picture selection screen displayed.




### 4 Disconnect the USB cable from the camera.

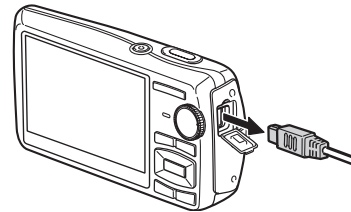

### 5 Disconnect the USB cable from the printer.

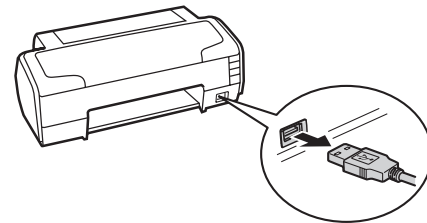


You can use [EASY PRINT] even when the camera is turned off or in shooting mode. With the camera turned off or in shooting mode, connect the USB cable. The selection screen for the USB connection is displayed. Select [EASY PRINT].

 "EASY PRINT" Step 3 (P. 40), "CUSTOM PRINT" Step 2 (P. 40)

#### Other print modes and print settings (CUSTOM PRINT)

**1** Follow Steps 1 and 2 on P. 39 to display the screen for Step 3 above, and then press .


**2** Select [CUSTOM PRINT], and press .

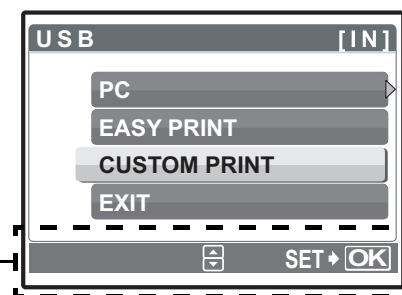

Operation guide 


**3** Follow the operation guide to adjust print settings.

## Selecting a print mode

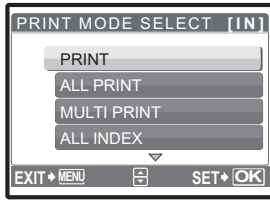

<b>PRINT</b>	Prints the selected picture.
<b>ALL PRINT</b>	Prints all the pictures stored in the internal memory or the card.
<b>MULTI PRINT</b>	Prints one picture in multiple layout format.
<b>ALL INDEX</b>	Prints an index of all the pictures stored in the internal memory or the card.
<b>PRINT ORDER</b>	Prints the pictures according to the print reservation data on the card. If no print reservations have been made, this option is not available. ☞ "Print settings (DPOF)" (P. 42)

## Setting the print paper

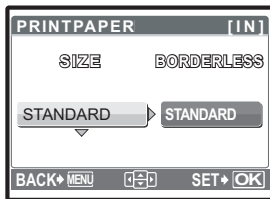

<b>SIZE</b>	Choose from the available paper sizes on your printer.
<b>BORDERLESS</b>	Select with or without borders. In [MULTI PRINT] mode, you cannot print with a border. <b>OFF</b> (☐) The picture is printed inside a blank frame. <b>ON</b> (☐) The picture is printed filling the entire page.
<b>PICS/SHEET</b>	Available in [MULTI PRINT] mode only. The number of prints that can be printed vary depending on the printer.

### ! Note

- If the [PRINTPAPER] screen is not displayed, [SIZE], [BORDERLESS] and [PICS/SHEET] are set to the standard.


## Selecting the picture to print



<b>PRINT</b>	Prints one copy of the selected picture. When [SINGLE PRINT] or [MORE] has been selected, a single copy or multiple copies are printed.
<b>SINGLE PRINT</b>	Makes a print reservation for the displayed picture.
<b>MORE</b>	Sets the number of prints and data to be printed for the displayed picture.

Press ◀▶ to select the picture you want to print. You can also use the zoom button and select a picture from the index display.


## Setting the number of prints and data to be printed

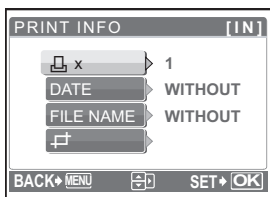


<b>x</b>	Sets the number of prints. You can select up to 10 prints.
<b>DATE</b> (🕒)	If you select [WITH], pictures are printed with the date.
<b>FILE NAME</b> (📁)	If you select [WITH], pictures are printed with the file name.
<b>☐</b>	Use the arrow pad and zoom button, adjust the location and size of the trimming frame, then press <b>OK/FUNC</b> to print the cropped picture.

#### 4 Select [PRINT], and press **OK/FUNC**.

- Printing starts.
- When printing is finished, the [PRINT MODE SELECT] screen is displayed.

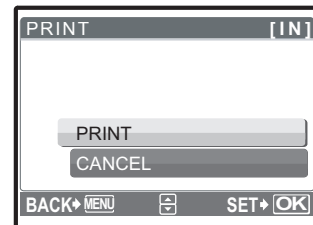


#### To cancel printing

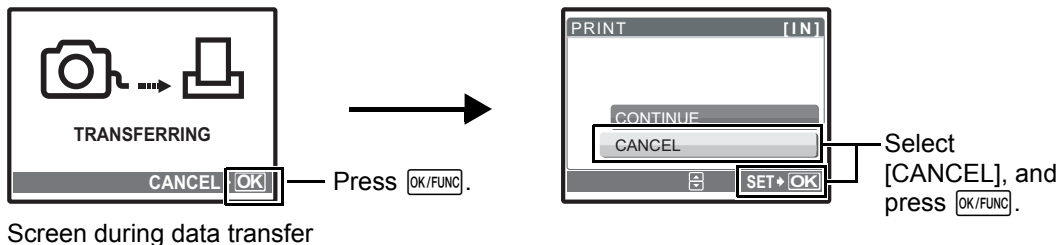

#### 5 In the [PRINT MODE SELECT] screen, press **MENU**.

- A message is displayed.

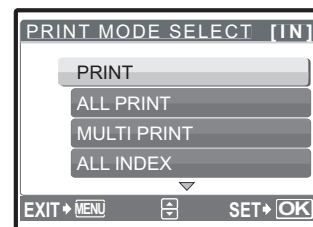

#### 6 Disconnect the **USB** cable from the camera.

#### 7 Disconnect the **USB** cable from the printer.

## Print settings (DPOF)

### How to make print reservations

Print reservation allows you to save printing data (the number of prints and the date and time information) with the pictures stored on the card.

With print reservation, you can print out pictures easily either at home using a personal DPOF-compatible printer or at a photo store that supports DPOF. DPOF is a standard format used to record automatic print information from digital cameras.

Only the images stored on the card can be reserved to print. Insert a card with recorded pictures into the camera before making print reservations.

Pictures with print reservations can be printed using the following procedures.

#### Printing using a DPOF-compatible photo store.

You can print the pictures using the print reservation data.

#### Printing using a DPOF-compatible printer.

Printing is possible directly from a card containing print reservation data, without using a computer. For more details, refer to the printer's instruction manual. A PC card adapter may also be necessary.

## ! Note

- DPOF reservations set by another device cannot be changed by this camera. Make changes using the original device. If a card contains DPOF reservations set by another device, entering reservations using this camera may overwrite the previous reservations.
- You can make DPOF print reservations for up to 999 images per card.
- Not all functions may be available on all printers, or at all photo stores.
- Panoramic pictures may not be printable at all photo stores.

## To use print services without using DPOF


- Pictures stored in the internal memory cannot be printed at a photo store. The pictures need to be copied to a card beforehand.  
☞ “BACKUP Copying pictures in the internal memory to the card” (P. 34)

## Single-frame reservation


Follow the operation guide to make a print reservation for a selected picture.

**1** Press **MENU** in the playback mode and display the top menu.

**2** Select **[PRINT ORDER]** ▶ **[ ]**, and press **OK/FUNC**.

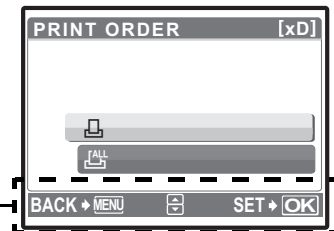

**3** Press **◀▶** to select the frames for print reservations, and then press **△▽** to set the number of prints.

- You cannot make print reservations for pictures with .
- Repeat Step 3 to make print reservations for other pictures.

### Cropping a picture


- Use zoom button to display the trimming frame.
- Use the arrow pad and zoom button to adjust the position and the size of area-selection box then press **OK/FUNC**.




**4** When you finish making print reservations, press **OK/FUNC**.

**5** Select the date and time print setting, and press **OK/FUNC**.

- NO** The pictures are printed without the date and time.  
**DATE** The selected pictures are printed with the shooting date.  
**TIME** The selected pictures are printed with the shooting time.

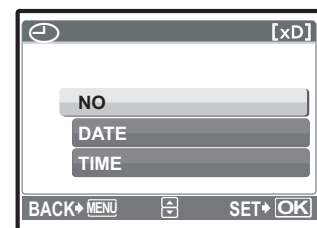


**6** Select **[SET]**, and press **OK/FUNC**.

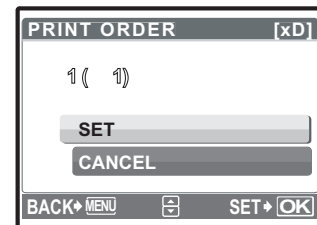

## All-frame reservation

Reserves all the pictures stored on the card. The number of prints is set at one print per picture.



- 1 Press **MENU** in the playback mode and display the top menu.
- 2 Select **[PRINT ORDER]** ▶ **[**], and press **OK/FUNC**.
- 3 Select the date and time setting, and press **OK/FUNC**.
  - NO The pictures are printed without the date and time.
  - DATE All pictures are printed with the shooting date.
  - TIME All pictures are printed with the shooting time.
- 4 Select **[SET]**, and press **OK/FUNC**.


## Resetting print reservation data

You can reset all the print reservation data or just for selected pictures.


- 1 Select top menu ▶ **[PRINT ORDER]**, and press **OK/FUNC**.

### To reset the print reservation data for all the pictures

- 2 Select **[**] or **[**], and press **OK/FUNC**.
- 3 Select **[RESET]**, and press **OK/FUNC**.

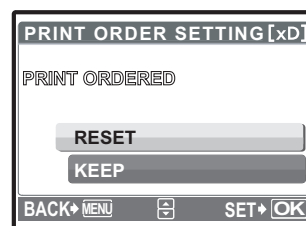

### To reset the print reservation data for a selected picture

- 2 Select **[**], and press **OK/FUNC**.
- 3 Select **[KEEP]**, and press **OK/FUNC**.
- 4 Press **◀▶** to select the picture with the print reservations you want to cancel, and press **▽** to decrease the number of prints to 0.
  - Repeat Step 4 to cancel print reservations for other pictures.
- 5 When you are finished canceling print reservations, press **OK/FUNC**.
- 6 Select the date and time setting, and press **OK/FUNC**.
  - The setting is applied to the remaining pictures with print reservations.
- 7 Select **[SET]**, and press **OK/FUNC**.

# Using OLYMPUS Master

 
## Overview

Using the USB cable provided with your camera, you can connect the camera and computer and download (transfer) the images to your computer using the OLYMPUS Master software, also provided with the camera.


Prepare the following items before starting.



OLYMPUS Master 2  
CD-ROM



USB cable

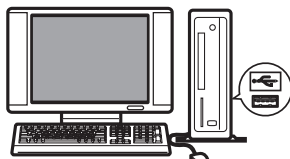

Computer that meets the operating  
environment (P. 46)

Install the OLYMPUS Master software

P. 46



Connect the camera to the computer using the  
USB cable

P. 48



Start up the OLYMPUS Master software

P. 49



Download image files to the computer

P. 49



Disconnect the camera from the computer

P. 50

## Using OLYMPUS Master

### What is OLYMPUS Master?

OLYMPUS Master is a software application for managing your digital images on your computer. Installing it on your computer lets you do the following:

- **Download images from the camera or other media**
- **View images and movies**
  - You can run a slideshow and play back sound.
- **Manage images**
  - Manage images in an album or folder.
  - Downloaded images are automatically sorted by date, allowing you to search for images quickly.
- **Edit images**
  - You can rotate images, trim them and change the size.
- **Edit images with the filter and correction functions**



- **Print images**
  - You can easily print images.
- **Make panoramic images**
  - You can make panoramic images using pictures taken in panorama mode.
- **Update the version of your camera's firmware.**

For details on other functions and operations, refer to the "Help" guide in the OLYMPUS Master reference manual.

## Install the OLYMPUS Master software

Before installing the OLYMPUS Master software, please confirm that your computer is compatible with the following system requirements.  
For newer operating systems, please refer to the Olympus web site as shown on the back cover of this manual.

### Operating environment

#### Windows

---

OS	Windows 2000 Professional/XP Home Edition/XP Professional/Vista
CPU	Pentium III 500 MHz or later
RAM	256 MB or more
Hard disk capacity	500 MB or more
Monitor	1,024 × 768 pixels or more 65,536 colors or more (16.77 million colors or more recommended)
Other	USB port or IEEE 1394 port Internet Explorer 6 or later QuickTime 7 or later recommended DirectX 9 or later recommended

#### Note

- **Windows 98/98SE/Me are not supported.**
- Use a computer with a pre-installed operating system. Operations are not guaranteed on home-built computers or computers with an updated operating system.
- Operations are not guaranteed when using an added USB port or IEEE 1394 port.
- To install the software, you must log on as a user with administrators' privileges.

#### Macintosh

---

OS	Mac OS X v10.3 or later
CPU	Power PC G3 500 MHz or later Intel Core Solo/Duo 1.5 GHz or later
RAM	256 MB or more
Hard disk capacity	500 MB or more
Monitor	1,024 × 768 pixels or more 32,000 colors or more (16.77 million colors or more recommended)
Other	USB port or IEEE 1394 port (FireWire) Safari 1.0 or later (1.3 or later recommended) QuickTime 6 or later

#### Note

- **Mac versions earlier than OS X 10.3 are not supported.**
- Operations are not guaranteed when using an added USB or IEEE 1394 (FireWire) port.
- To install the software, you must log on as a user with administrators' privileges.
- Be sure to remove the media (drag & drop onto the trash icon) before performing the following operations. Failure to do so could result in unstable computer operation and the need to reboot.
  - Disconnect the cable connecting the camera to the computer
  - Turn off the camera
  - Open the camera's battery/card compartment cover

## Windows

### 1 Insert the CD-ROM into the CD-ROM drive.

- The OLYMPUS Master setup screen is displayed.
- If the screen is not displayed, double-click the “My Computer” icon and click the CD-ROM icon.

### 2 Select the display language and click the “OLYMPUS Master 2” button.

- When the component installation screen is displayed, click “OK”.

### 3 Click “Next” and follow the on-screen instructions.





- When the OLYMPUS Master licensing agreement is displayed, read the agreement and click “Yes” to proceed with the installation.

### 4 When the user information screen is displayed, enter your “Name”, select your “Region” and click “Next”.

### 5 When the setup type selection screen is displayed, click “Install”.

- To select the components to install, select “Custom”.

- The installation begins. The screen confirming that setup is completed is displayed. Click “Close”.
- Next, the screen confirming whether to install OLYMPUS muvee theaterPack Trial Version is displayed. To install this software, click “Install”.

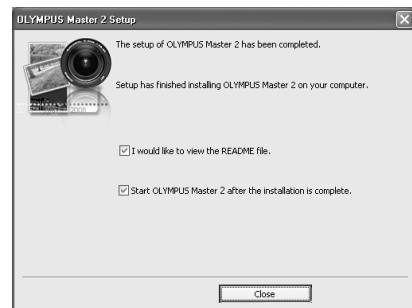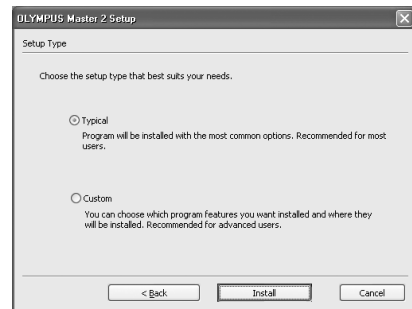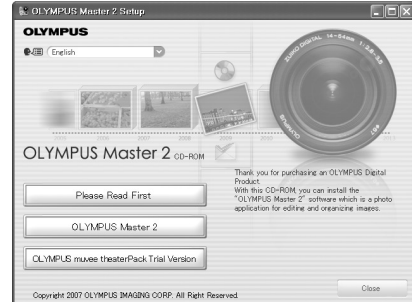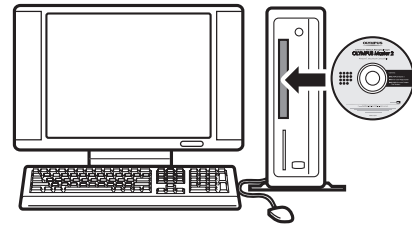

## Macintosh

### 1 Insert the CD-ROM into the CD-ROM drive.

- The CD-ROM window is displayed.
- If the CD-ROM window is not displayed, double-click the CD-ROM icon on the desktop.



### 2 Double-click the "Setup" icon on the desktop.


- The OLYMPUS Master installation screen is displayed.
- Follow the on-screen instructions.
- When the OLYMPUS Master licensing agreement is displayed, read the agreement and click "Continue" and then "Continue" to proceed with the installation.
- The screen confirming that installation is completed is displayed.
- You must restart your computer before using OLYMPUS Master.



## Connecting the camera to a computer


### 1 Make sure the camera is turned off.

- The monitor is off.
- The lens is retracted.

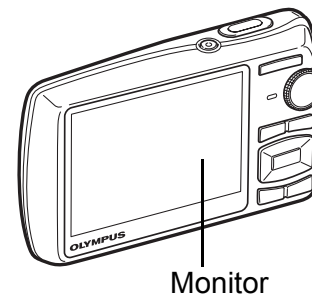


### 2 Connect the multi-connector on the camera to the USB port on the computer using the provided USB cable.

- Refer to your computer's instruction manual to locate the position of the USB port.
- The camera turns on automatically.
- The monitor turns on and the selection screen for the USB connection is displayed.

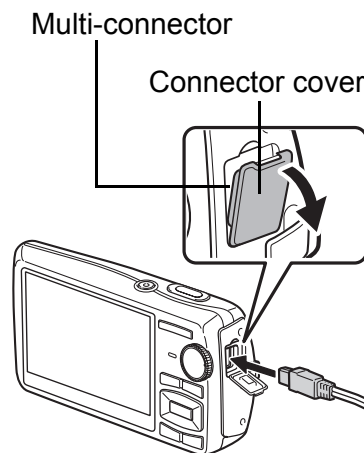

### 3 Select [PC], and press **OK/FUNC**.

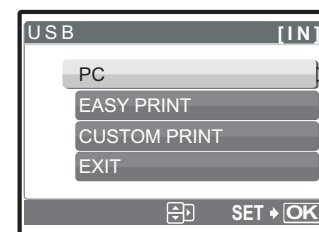

## 4 The camera is recognized by the computer.


### • Windows

When you connect the camera to your computer for the first time, the computer attempts to recognize the camera. Click “OK” to exit the message that is displayed. The camera is recognized as a “Removable Disk”.

### • Macintosh

The iPhoto program is the default application for managing digital images. When you connect your digital camera for the first time, the iPhoto application starts automatically, so close this application and start OLYMPUS Master.

## ! Note

- The camera functions are disabled while the camera is connected to a computer.
- Connecting the camera to a computer via a USB hub may cause unstable operation. In this case, do not use a hub, but connect the camera directly to the computer.
- Images cannot be transferred to your computer with OLYMPUS Master if [PC] is selected in Step 3,  is pressed and [MTP] is selected.

## Start up the OLYMPUS Master software

### Windows

**1** Double-click the “OLYMPUS Master 2” icon  on the desktop.

### Macintosh

**1** Double-click the “OLYMPUS Master 2” icon  in the “OLYMPUS Master 2” folder.

- The browse window is displayed.
- When OLYMPUS Master is started up for the first time after installation, the OLYMPUS Master initial setting screen and user registration screen are displayed before the browse window. Follow the on-screen instructions.

### To exit OLYMPUS Master

**1** Click “Exit”  on any window.

- OLYMPUS Master is exited.

## Displaying camera images on a computer

### Downloading and saving images


**1** Click “Transfer Images”  on the browse window, and then click “From Camera” .

- The window for selecting the pictures you want to transfer from the camera is displayed. All the images in the camera are displayed.

**2** Select “New Album” and enter an album name.

**3** Select the image files and click “Transfer Images”.

- A window indicating that the download is complete is displayed.

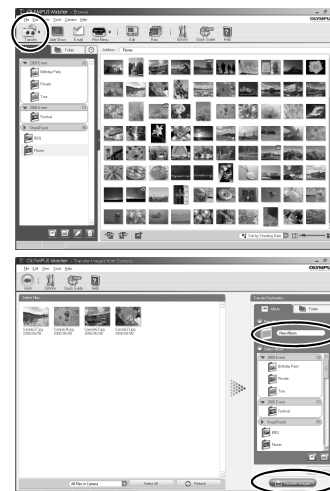

## 4 Click “Browse images now”.


- The downloaded images are displayed in the browse window.



### To disconnect the camera


#### 1 Make sure that the card access lamp has stopped blinking.


Card access lamp

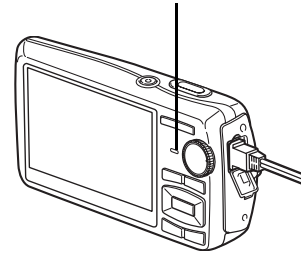

#### 2 Make the following preparations for disconnecting the USB cable.

##### Windows

- ① Click the “Unplug or Eject Hardware” icon  in the system tray.
- ② Click the message that is displayed.
- ③ When a message is displayed saying that the hardware can be ejected safely, click “OK”.

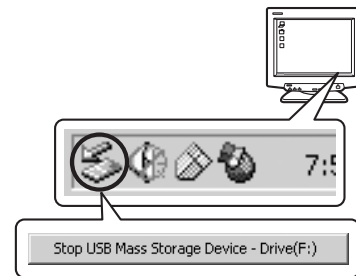


##### Macintosh

- ① The trash icon changes to the eject icon when the “Untitled” or “NO\_NAME” icon on the desktop is dragged. Drag and drop it on the eject icon.



#### 3 Disconnect the USB cable from the camera.

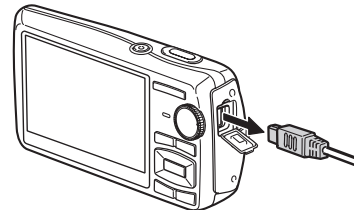

#### ! Note


- Windows: When you click “Unplug or Eject Hardware”, a warning message may be displayed. Make sure that image data is not being downloaded from the camera and that all applications are closed. Click the “Unplug or Eject Hardware” icon again and disconnect the cable.

## Viewing still pictures and movies

**1** Click the “Album” tab on the browse window and select the album that you want to view.

- The selected album image is displayed in the thumbnail area.

**2** Double-click the still picture thumbnail that you want to view.

- OLYMPUS Master switches to the image edit window and the picture is enlarged.
- Click “Back”  to return to the browse window.


Thumbnail



### To view a movie

**1** Double-click the movie thumbnail that you want to see in the browse window.

- OLYMPUS Master switches to the edit window and the first frame of the movie is displayed.

**2** To play back the movie, click “Play”  at the bottom of the screen.




## To download and save images to a computer without using OLYMPUS Master

This camera is compatible with USB mass storage. You can connect the camera to your computer using the USB cable provided with the camera to download and save images without using OLYMPUS Master. The following environment is required to use the USB cable to connect the camera to your computer.

**Windows:** Windows 2000 Professional/XP Home Edition/XP Professional/Vista

**Macintosh:** Mac OS X v10.3 or later


### Note

- If your computer is running Windows Vista, you can select [PC] in Step 3 on P. 48, press , and select [MTP] to use Windows Photo Gallery.
- Data transfer is not guaranteed in the following environments, even if your computer is equipped with a USB port.
  - Computers with a USB port added by means of an extension card, etc.
  - Computers without a factory-installed OS and home-built computers

## To increase the number of languages

Please take care that your battery is fully charged!

- 1 Make sure that your computer is connected to the Internet.**
- 2 Plug the USB cable into the USB port on the computer.**
- 3 Plug the other end of the USB cable into the camera's USB connector.**
  - The camera turns on automatically.
  - The monitor turns on and the selection screen for the USB connection is displayed.
- 4 Select [PC], and press OK/FUNC.**
- 5 In the browse window, select "Camera", then "Update Camera/Add Display Language".**
  - The confirmation window for updating is displayed.
- 6 Click "OK".**
  - The updating the camera window is displayed.
- 7 Click "Add Language" in the updating camera display.**
  - The "Add Display Language of Camera" window is displayed.

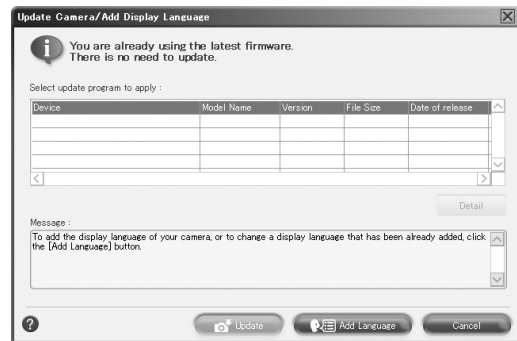

- 8 Click ▼ and select a language.**
- 9 Click "Add".**
  - The new language is downloaded to your camera. Please do not remove any cable or the battery while the camera is processing.



- 10 After the download procedure the camera display will show "OK". You can remove the cables and turn power off. After restarting the camera you will be able to choose the new language from [SETUP].**

# Getting to know your camera better

## Shooting tips and information

### Tips before you start taking pictures

#### The camera does not turn on even when a battery is loaded

##### The battery is not fully charged

- Charge the battery with the charger.

##### The battery is temporarily unable to function because of the cold

- Battery performance declines in low temperatures, and the charge may not be sufficient to turn on the camera. Remove the battery and warm it by putting it in your pocket for a while.

#### The card cannot be used

- If the contact area of the card is dirty/dusty, data in the card cannot be read and the [CARD SETUP] screen appears. In this case, select [xD CARD CLEAN], press [OK/FUNC], remove the card, and then wipe the contact area with a soft dry cloth.

#### No picture is taken when the shutter button is pressed

##### The camera is in sleep mode

- To save battery power, the camera automatically goes into sleep mode and the monitor turns off if there is no operation for 3 minutes when the camera is turned on (when the lens is extended and the monitor is on). No picture is taken even if the shutter button is fully pressed in this mode. Operate the zoom button or other buttons to restore the camera from sleep mode before taking a picture. If the camera is left on for 12 minutes, it automatically turns off (the lens retracts and the monitor turns off). Press **POWER** to turn the camera on.

##### The mode dial is set to or

- This is the playback mode for displaying pictures on the monitor. Set the mode dial to a shooting mode.

##### The mode dial is in the position of **GUIDE**

- No pictures can be taken when the shooting guide is being displayed. Take pictures after selecting your desired shooting effect in the shooting guide or set it to a setting other than **GUIDE** in shooting mode.

##### The flash is charging


- Wait until the  (flash charge) mark stops blinking before taking the picture.

##### The camera's internal temperature increases

- With prolonged camera use, the internal temperature may increase, resulting in automatic shutdown. If this occurs, remove the battery from the camera and wait until the camera has sufficiently cooled. The camera's external temperature may also increase during use, however this is normal and does not indicate malfunction.

##### The memory gauge is full

- No pictures can be taken when the memory gauge is full. Wait until there is space in the memory gauge.

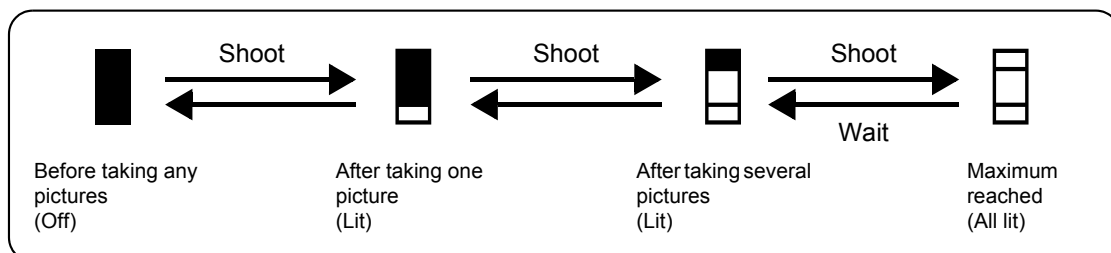

## The date and time have not been set

### The camera has been used in the same conditions from the time of purchase

- No date and time have been set for the camera at the time of purchase. Set the date and time before using the camera.

- ☞ “Turn the camera on” (P. 6)
- ☞ “Setting the date and time” (P. 36)

### The battery has been pulled out of the camera

- The date and time settings will be returned to the factory default settings if the camera is left without battery for approximately 3 days. Also, the date and time setting will be canceled earlier than this if the battery has been in the camera for a short period of time. Before taking important pictures, check that the date and time settings are correct.

## Shooting tips

### Focusing on the subject

There are several ways to focus, depending on the subject.

#### When the subject is not in the center of the frame

- Place the subject in the center of the frame, lock the focus on the subject, and then recompose your picture.
- Set [AF MODE] to [iESP].

- ☞ “AF MODE Changing the focusing area” (P. 27)


#### The subject is moving quickly

- Focus the camera on a point roughly the same distance away as the subject you want to shoot and lock the focus (by pressing the shutter button halfway). Then recompose your picture and press the shutter button completely as the subject enters the frame.


### Subjects that are difficult to focus on

- Under certain types of conditions, it is difficult to focus using auto focus. The green lamp on the monitor lights, allowing you to check if the focus is locked.


The green lamp blinks.  
The subject cannot be brought into focus.

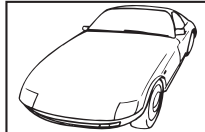

Subject with low contrast

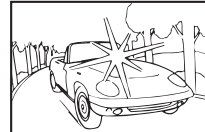

Subject with an extremely bright area in the center of the frame

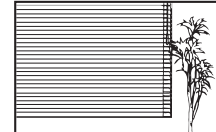


Subject without vertical lines


The green lamp lights,  
but the subject cannot be brought into focus.



Subjects at different distances

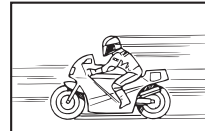


Fast-moving subject

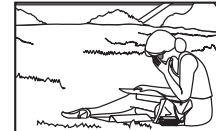
 


The subject is not in the center of the frame

In these cases, focus (focus lock) on an object with high contrast at the same distance as the intended subject, recompose your shot and then take the picture. If the subject has no vertical lines, hold the camera vertically and focus the camera using the focus lock function by pressing the shutter button halfway, and then return the camera to the horizontal position while keeping the button pressed halfway and take the picture.

## Prevent blur by using image stabilization


Be sure to hold the camera firmly with both hands and press the shutter button slowly so as to avoid moving the camera. You can also reduce blur by setting the mode dial to  before shooting the picture.

 “ Shooting pictures using digital image stabilization” (P. 12)


Pictures are more likely to be blurry when:

- images are shot at a high-magnification zoom setting, i.e. using both optical zoom and digital zoom functions,
- the object is dark and the shutter speed is slow, or
- scene modes where the flash is turned off and/or the shutter speed is slow.

## Taking stabilized pictures without the flash

The flash is activated automatically when there is insufficient light, or when the camera is shaken. To take pictures with no flash in dark places, set the flash mode to  and set as follows:

### Increase the [ISO] setting


 “ISO Changing the ISO sensitivity” (P. 25)

## The picture is too grainy

There are several factors that can cause the picture to appear grainy.


### Using the digital zoom to take close-up pictures

- With the digital zoom, part of the image is cropped and enlarged. The greater the magnification, the grainier the picture appears.

 “DIGITAL ZOOM Zooming in on your subject” (P. 26)


### Increasing the ISO sensitivity

- When you increase the [ISO] setting, “noise”, which appears as spots of unwanted color or unevenness in the color, can be introduced and give the picture a grainy appearance. This camera is equipped with a function to allow shooting at high sensitivity while suppressing noise; however, increasing the ISO sensitivity can result in some noise, depending on the shooting conditions.


 “ISO Changing the ISO sensitivity” (P. 25)


## Taking pictures with the correct color


- The reason why there are sometimes differences between the actual colors and the colors recorded in a picture is related to the light source illuminating the subject. [WB] is the function that helps the camera determine the true colors. Normally, the [AUTO] setting provides the optimal white balance, but depending on the subject, results may be better if you manually adjust the [WB] setting.
  - When the subject is in the shade on a sunny day
  - When the subject is illuminated by both natural light and indoor lighting, such as when near a window
  - When there is no white in the center of the frame



 “WB Adjusting the color of a picture” (P. 25)

## Taking pictures of a white beach or snow scene

- Take pictures with  in **SCN** mode. Suitable for taking pictures on a sunny day at the beach or in the snow.

 “**SCN** (Scene) Selecting a scene mode according to the shooting situation” (P. 24)

- Often, bright subjects (such as snow) turn out darker than their natural colors. Use  to adjust toward [+] to make these subjects closer to their true shades. Conversely, when you are shooting dark subjects, it can be effective to adjust toward the [-]. Sometimes, using the flash may not produce the brightness (exposure) that was intended.

 “ button Changing picture brightness (Exposure compensation)” (P. 16)

## Misalignment of panoramic pictures

- Panning along the camera central axis reduces picture misalignment. When you shoot close subjects, panning along the axis of the tip of the lens gives good results.
- In [COMBINE IN CAMERA1] mode, the camera automatically detects its own position except for the following cases (In such cases, use [COMBINE IN CAMERA 2] or [COMBINE IN PC].):
  - when panning the camera in a quick or unsteadily manner.
  - when shooting a low contrast subject (blue sky, etc.).
  - when shooting a moving subject framed in full screen.
  - when panning the camera with no images on-screen.

## Taking pictures of a subject against backlight

- When [SHADOW ADJ. ON] is selected, the subject's face appears brighter even against backlight and the color of the background is enhanced in the picture. This function can also be used to shoot a subject inside a home or building from outside.
  - ☞ “☞: Brightening the subject against backlight” (P. 17)
- With [ESP/□] set to [□], the picture can be taken based on the brightness at the center of the monitor without being affected by the light in the background.
  - ☞ “ESP/□ Changing the area for measuring the brightness of a subject” (P. 26)
- Set the flash to [⚡] to activate fill-in-flash. You can shoot a subject against backlight without the face of the subject appearing dark. [⚡] is effective for shooting against backlight and under fluorescent and other artificial lighting.
  - ☞ “▷⚡ button Flash shooting” (P. 16)
- Selecting a [+] exposure value with △□, is useful in shooting a subject against backlight.
  - ☞ “△□ button Changing picture brightness (Exposure compensation)” (P. 16)
- When [AF MODE] is set to [FACE DETECT], the camera determines the exposure by metering a face and the face in the picture taken will appear brighter even in backlight conditions.
  - ☞ “AF MODE Changing the focusing area” (P. 27)

## Additional shooting tips and information

### Increasing the number of pictures that can be taken

There are two ways to record the pictures you take with this camera.

#### Recording pictures to the internal memory

- Pictures are recorded to the internal memory, and when the number of storable still pictures reaches 0, you must connect the camera to a computer to download the pictures, and then erase the pictures from the internal memory.

#### Using a card (optional)

- Pictures are recorded to the card when inserted in the camera. When the card is full, you can download the pictures to a computer, and then either erase the pictures from the card or use a new card.
- Pictures are not recorded to the internal memory when a card is inserted in the camera. Pictures in the internal memory can be copied to the card using the [BACKUP] function.
  - ☞ “BACKUP Copying pictures in the internal memory to the card” (P. 34)
  - “The card” (P. 66)

## Number of storable still pictures and recording length of movies


### Still pictures

Image quality	Image size	Number of storable still pictures			
		Internal memory		Using a 1 GB card	
		With sound	Without sound	With sound	Without sound
SHQ	3264 × 2448	12	12	253	255
HQ	3264 × 2448	23	23	492	499
SQ1	2560 × 1920	38	39	820	841
	2304 × 1728	47	48	999	1031
	2048 × 1536	59	61	1254	1305
SQ2	1600 × 1200	92	97	1938	2063
	1280 × 960	138	151	2907	3198
	1024 × 768	202	233	4264	4920
	640 × 480	233	276	4920	5814
16:9	1920 × 1080	66	69	1390	1453

### Movie

Image quality	Image size	Continuous recording time	
		Internal memory	Using a 1 GB card
SHQ	640 × 480 (30 frames/sec.)	10 sec.	10 sec.
HQ	320 × 240 (15 frames/sec.)	2 min. 22 sec.	29 min.
SQ	160 × 120 (15 frames/sec.)	9 min. 29 sec.	29 min.

### Using a new card

- When using a non-Olympus card or a card used for other purposes with a computer, etc., use the [FORMAT] function to format the card.
-  "MEMORY FORMAT (FORMAT) Formatting the internal memory or card" (P. 34)

## Lamp indicators

This camera uses several lamps to indicate the camera status.

Lamp	Status
Self-timer lamp	The lamp lights for approximately 10 seconds, blinks for approximately 2 seconds, and then the picture is taken.
Card access lamp	Blinking: An image or movie is being recorded or downloaded (when connected to a computer). <ul style="list-style-type: none"><li>Do not do any of the following while the card access lamp is blinking. Doing so may prevent the image data from being saved and render the internal memory or card unusable.<ul style="list-style-type: none"><li>Open the battery/card compartment cover.</li><li>Remove the battery and the card.</li><li>Connect or disconnect the AC adapter.</li></ul></li></ul>
Green lamp of the monitor	Lit: The focus and exposure are locked. Blinking: The focus is not locked. <ul style="list-style-type: none"><li>Release your finger from the shutter button, re-position the AF target mark on the subject and press the shutter button halfway again.</li></ul>

## Extending the useful life of the battery

- Performing any of the following operations when not actually taking pictures can deplete the battery power.
  - Repeatedly pressing the shutter button halfway
  - Repeatedly using the zoom
- To minimize the battery consumption, set [POWER SAVE] to [ON] and turn off the camera whenever it is not in use.

 "POWER SAVE Setting the camera to the power save mode" (P. 38)

## Functions that cannot be selected from menus

- Some items are not selectable from the menus when using the arrow pad.
  - Items that cannot be set with the current shooting mode
  - Items that cannot be set because of an item that has already been set: [s], Flash Mode, etc.
  - Items used to edit pictures taken with another camera.
- Some functions cannot be used when there is no card in the camera. [PANORAMA], [PRINT ORDER], [FORMAT], [BACKUP]

## Selecting the appropriate image quality

A record mode expresses a combination of desired image sizes and compression levels. Use the following examples to help determine the optimal record mode when shooting.

**To make high quality prints on full-size paper such as A3 (16.5 × 11.7 in.)/To edit and process images on a computer**

- [SHQ] or [HQ]

**To print A3 (16.5 × 11.7 in.)/A4 (11.7 × 8.5 in.)-size images**

- [SQ1]

**To print postcard-size images/To send as an e-mail attachment or post on a web site**


- [SQ2]


**To express the broadness of a subject such as landscapes/To view pictures on a wide-screen television**

- [16:9]

 "IMAGE QUALITY Changing the image quality" (P. 21)

## Restoring default settings

- This camera retains the settings (except for **AUTO**, , and **SCN**) even after the power is turned off. To return the settings to default settings, execute [RESET].

 “RESET Restoring default settings” (P. 22)

## Confirming the exposure when the monitor is difficult to see outdoors


The monitor may be difficult to see and the exposure difficult to confirm when shooting outdoors.



### Press DISP./ repeatedly to display the histogram

- Set the exposure so that the graph is concentrated on the outer edges and the graph is balanced on both sides.

#### How to read the histogram

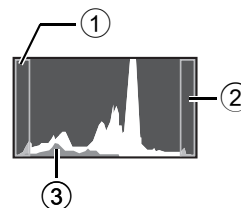- ① If the peak fills too much of the frame, the image will appear mostly black.
- ② If the peak fills too much of the frame, the image will appear mostly white.
- ③ The part indicated in green in the histogram shows the luminance distribution within the AF target mark.



 “DISP./ button Changing the information on display/Display the menu guide/Checking the time” (P. 18)

## Playback help and troubleshooting tips

### Blurry images cannot be stabilized

- Even if [DIS EDIT] is selected, not all blurry pictures can be fixed.
  - If the shutter speed is low and/or if the digital image is severely shaken: The recorded picture may not be stabilized or cannot acquire the proper stabilization effect.
  - Moving object: The image cannot acquire the proper stabilization effect.
- In addition, the digital image stabilization mode cannot be activated when:
  - the internal memory capacity or the card capacity is insufficient.
  - the image was extracted from a movie, the image was shot with another camera, or the image was already fixed with Digital Image Stabilization Edit.

### The red-eye cannot be fixed


- Depending on the picture, the red-eye may not be fixed. Also, parts except the eye may be fixed.



## Playback tips

### Playing back the picture in the internal memory


- When a card has been inserted in the camera, the picture in the internal memory cannot be played back. Pull out the card before operating the camera.

### Viewing picture information



- Play back a picture, and press DISP./. Press DISP./ repeatedly to change the amount of information displayed.

 “DISP./ button Changing the information on display/Display the menu guide/Checking the time” (P. 18)

## Quickly displaying a desired picture

- Press W on the zoom button to view the pictures as thumbnails (index display) or in a calendar format (calendar display).
-  “Zoom button Zooming while shooting/close-up playback” (P. 15)

## Erasing sound recorded to still pictures

- Once sound is added to a picture, it is not possible to erase the sound. In this case, make a re-recording with silence. Sound recording is not possible if there is insufficient space in the internal memory or on the card.
-  “ Adding sound to still pictures” (P. 33)

## Viewing pictures on a computer

### Viewing the entire picture on a computer screen

The size of the picture displayed on a computer screen changes depending on the computer settings. When the monitor setting is 1,024 × 768 and you are using Internet Explorer to view a picture with an image size of 2,048 × 1,536 at 100%, the entire picture cannot be viewed without scrolling. There are several ways you can view the entire picture on the computer screen.





 
 
 
#### View the picture using image browsing software


 
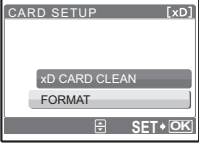
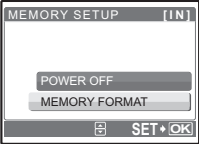





 
- Install the OLYMPUS Master 2 software from the provided CD-ROM.

#### Change the monitor setting

- The icons on the computer desktop may be rearranged. For details on changing the settings on your computer, refer to the computer's instruction manual.

## When you get an error message on the camera...


Monitor indication	Possible cause	Corrective action
 CARD ERROR	There is a problem with the card.	This card cannot be used. Insert a new card.
 WRITE PROTECT	Writing to the card is prohibited.	The recorded image has been protected (read-only) on a computer. Download the image to a computer and cancel the read-only setting.
 MEMORY FULL	The internal memory has no available memory and cannot store any new data.	Insert a card or erase unwanted data. Before erasing, back up the data of important pictures using the card, or download such pictures to a computer.
 CARD FULL	The card has no available memory and cannot store any new data.	Replace the card or erase unwanted data. Before erasing, download important pictures to a computer.
 NO PICTURE	There are no pictures in the internal memory or on the card.	The internal memory or the card contains no pictures. Record pictures.
 PICTURE ERROR	There is a problem with the selected picture and it cannot be played back on this camera.	Use image processing software to view the picture on a computer. If that cannot be done, the image file is damaged.
 THE IMAGE CANNOT BE EDITED	Pictures taken by other cameras or previously edited or corrected pictures cannot be edited or fixed.	Use image processing software to edit the pictures.

Monitor indication	Possible cause	Corrective action
 <b>CARD-COVER OPEN</b>	The battery/card compartment cover is open.	Close the battery/card compartment cover.
 <b>BATTERY EMPTY</b>	The battery is empty.	Charge the battery.
	The data in the card cannot be read. Or, the card is not formatted.	Select [xD CARD CLEAN], and press <b>[OK/FUNC]</b> . <ul style="list-style-type: none"> <li>Remove the card and wipe the contact area with a soft dry cloth.</li> <li>Select [FORMAT] ► [YES] and press <b>[OK/FUNC]</b>. All data on the card is erased.</li> </ul>
	There is an error in the internal memory.	Select [MEMORY FORMAT] ► [YES] and press <b>[OK/FUNC]</b> . All data in the internal memory is erased.
 <b>NO CONNECTION</b>	The camera is not connected to the computer or printer correctly.	Disconnect the camera and connect it again correctly.
 <b>NO PAPER</b>	There is no paper in the printer.	Load some paper in the printer.
 <b>NO INK</b>	The printer has run out of ink.	Replace the ink cartridge in the printer.
 <b>JAMMED</b>	The paper is jammed.	Remove the jammed paper.
<b>SETTINGS CHANGED</b>	The printer's paper tray has been removed or the printer has been operated while changing settings on the camera.	Do not operate the printer while changing settings on the camera.
 <b>PRINT ERROR</b>	There is a problem with the printer and/or camera.	Turn off the camera and printer. Check the printer and remedy any problems before turning the power on again.
 <b>CANNOT PRINT</b>	Pictures recorded on other cameras may not be printed on this camera.	Use a computer to print.







 

 

 

 







## Functions available in shooting modes and scene modes

Some functions cannot be set in certain shooting modes. For more details, refer to the table below.

 indicates a restriction to the respective function of each **SCN** mode.

 “Functions available in shooting scenes” (P. 63)

### Functions available in shooting modes

Function	Shooting mode			<b>SCN</b>		Ref. Page
	P	AUTO				
Optical zoom	✓	✓	✓		✓*	P. 15
	✓	✓	✓	✓	✓	P. 16
	✓	✓	✓		—	P. 16
	✓	✓	✓		✓	P. 16
	✓	✓	✓		✓	P. 16
Shadow Adjustment Technology	✓	✓	✓		✓	P. 17
IMAGE QUALITY	✓	✓	✓		✓	P. 21
PANORAMA	✓	—	✓		—	P. 22
WB	✓	—	✓	✓	✓	P. 25
ISO	✓	—	—	—	—	P. 25
DRIVE	✓	—	✓	—	—	P. 26
FINE ZOOM	✓	—	✓		—	P. 26
DIGITAL ZOOM	✓	—	✓		✓	P. 26
ESP/ 	✓	—	✓		✓	P. 26
AF MODE	✓	—	✓		—	P. 27
	✓	—	✓		—	P. 27
DIS MOVIE MODE	—	—	—	—	✓	P. 27
SILENT MODE	✓	✓	✓	✓	✓	P. 27

\* The optical zoom is not available during movie recording. Set [DIGITAL ZOOM] to [ON] to enable the zoom function for shooting.

## Functions available in shooting scenes

Function \ SCN														Ref. Page
Optical zoom	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	P. 15
	✓	✓	✓	—	✓	—	—	✓	—	—	—	✓ <sup>*1</sup>	✓ <sup>*2</sup>	P. 16
	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—	—	P. 16
	✓	✓ <sup>*3</sup>	✓ <sup>*3</sup>	✓	✓ <sup>*3</sup>	✓ <sup>*3</sup>	—	✓	✓	—	✓	✓	✓	P. 16
Shadow Adjustment Technology	✓	✓	—	—	✓	✓	—	✓	✓	✓	✓	✓	—	P. 17
IMAGE QUALITY	✓	✓	✓	✓ <sup>*4</sup>	✓	✓	✓	✓	✓	— <sup>*5</sup>	✓ <sup>*4</sup>	✓ <sup>*7</sup>	✓ <sup>*4</sup>	P. 21
PANORAMA	✓ <sup>*6</sup>	✓ <sup>*6</sup>	✓ <sup>*6</sup>	✓ <sup>*6</sup>	✓ <sup>*6</sup>	✓ <sup>*6</sup>	✓ <sup>*6</sup>	✓ <sup>*6</sup>	✓ <sup>*6</sup>	—	—	—	—	P. 22
FINE ZOOM	✓	✓	✓	—	—	✓	✓	✓	✓	✓	—	✓	—	P. 26
DIGITAL ZOOM	✓	✓	✓	—	—	✓	✓	✓	✓	✓	—	✓	—	P. 26
ESP/	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	P. 26
AF MODE	✓	✓	✓	✓	—	✓	—	✓	✓	✓	✓	✓	—	P. 27
	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—	—	—	P. 27

\*1 [] is not available.

\*2 [AUTO] and [] are not available.

\*3 [] is not available.

\*4 Only an image quality at [2048 × 1536] or lower is available.

\*5 The image quality is fixed at [640 × 480].

\*6 [COMBINE IN CAMERA 1] is not available.

\*7 [SHQ] is not available.

## Camera care

### Cleaning the camera

#### Exterior:

- Wipe gently with a soft cloth. If the camera is very dirty, soak the cloth in mild soapy water and wring well. Wipe the camera with the damp cloth and then dry it with a dry cloth. If you have used the camera at the beach, use a cloth soaked in clean water and wrung well.

#### Monitor:

- Wipe gently with a soft cloth.

#### Lens:

- Blow dust off the lens with a commercial blower, then wipe gently with a lens cleaner.

#### Battery/Charger:

- Wipe gently with a soft, dry cloth.

#### Note

- Do not use strong solvents such as benzene or alcohol, or chemically treated cloth.
- Mold may form on the lens surface if the lens is left dirty.

### Storage

- When storing the camera for extended periods, remove the battery, AC adapter and card, and keep in a cool, dry place that is well ventilated.
- Periodically insert the battery and test the camera functions.

#### Note

- Avoid leaving the camera in places where chemical products are handled since this may result in corrosion.

## Battery and charger

- This camera uses one Olympus lithium ion battery (LI-42B or LI-40B). No other type of batteries can be used.
- Power consumption by the camera varies depending on which functions are used.
- During the conditions described below, power is consumed continuously and the battery becomes exhausted quickly.
  - The zoom is used repeatedly.
  - The shutter button is pressed halfway repeatedly in shooting mode, activating the auto focus.
  - A picture is displayed on the monitor for an extended period of time.
  - The camera is connected to a computer or printer.
- Using an exhausted battery may cause the camera to turn off without displaying the battery level warning.
- The rechargeable battery is not fully charged at the time of purchase. Charge the battery fully with the LI-40C charger before use.
- The provided rechargeable battery usually takes approximately 5 hours to charge.
- This camera uses a charger specified by Olympus. Do not use any other type of charger.

# Representative plug of power supply cord of countries/regions around the world



A Type  
(American Type)



B Type  
(British Type)



BF Type  
(British Type)



B3 Type  
(British Type)



C Type  
(CEE Type)



SE Type  
(CEE Type)



O Type  
(Oceania Type)

The representative supply voltage and plug type are described in this chart.  
Depending on the area, different types of plugs and supply voltages are used.

Attention: Power cord meeting demands from each country shall be used.

- For only the United States

Use a UL Listed, 1.8 - 3 m (6 - 10 ft), Type SPT-2 or NISPT-2, AWG no. 18 power supply cord, rated for 125 V 7 A, with a non-polarized NEMA 1-15P plug rated for 125 V 15 A".

Europe				North America			
Countries/Regions	Voltage	Frequency (Hz)	Plug type	Countries/Regions	Voltage	Frequency (Hz)	Plug type
Austria	230	50	C	Canada	120	60	A
Belgium	230	50	C	USA	120	60	A
Czech	220	50	C	<b>Central America</b>			
Denmark	230	50	C	Countries/Regions	Voltage	Frequency (Hz)	Plug type
Finland	230	50	C	Bahamas	120/240	60	A
France	230	50	C	Costa Rica	110	60	A
Germany	230	50	C	Cuba	110/220	60	A/C
Greece	220	50	C	Dominican (rep)	110	60	A
Hungary	220	50	C	El Salvador	110	60	A
Iceland	230	50	C	Guatemala	120	60	A
Ireland	230	50	C/BF	Honduras	110	60	A
Italy	220	50	C	Jamaica	110	50	A
Luxemburg	230	50	C	Mexico	120/127	60	A
Netherlands	230	50	C	Nicaragua	120/240	60	A
Norway	230	50	C	Panama	110/220	60	A
Poland	220	50	C	<b>South America</b>			
Portugal	230	50	C	Countries/Regions	Voltage	Frequency (Hz)	Plug type
Romania	220	50	C	Argentina	220	50	C/BF/O
Russia	220	50	C	Brazil	127/220	60	A/C
Slovak	220	50	C	Chile	220	50	C
Spain	127/230	50	C	Colombia	120	60	A
Sweden	230	50	C	Peru	220	60	A/C
Switzerland	230	50	C	Venezuela	120	60	A
UK	240	50	BF	<b>Asia</b>			
<b>Asia</b>				Countries/Regions	Voltage	Frequency (Hz)	Plug type
China	220	50	A	<b>Middle East</b>			
Hong Kong	200/220	50	BF	Countries/Regions	Voltage	Frequency (Hz)	Plug type
India	230/240	50	C	Iran	220	50	C/BF
Indonesia	127/230	50	C	Iraq	220	50	C/BF
Japan	100	50/60	A	Israel	230	50	C
Korea (rep)	220	60	C	Saudi Arabia	127/220	50	A/C/BF
Malaysia	240	50	BF	Turkey	220	50	C
Philippines	220/230	60	A/C	UAE	240	50	C/BF
Singapore	230	50	BF	<b>Africa</b>			
Taiwan	110	60	A	Countries/Regions	Voltage	Frequency (Hz)	Plug type
Thailand	220	50	C/BF	Algeria	127/220	50	C
Vietnam	220	50	A/C	Congo (dem)	220	50	C
<b>Oceania</b>				Egypt	220	50	C
Countries/Regions	Voltage	Frequency (Hz)	Plug type	Ethiopia	220	50	C
Australia	240	50	O	Kenya	240	50	C/BF
New Zealand	230/240	50	O	Nigeria	230	50	C/BF
				South Africa	220/230	50	C/BF
				Tanzania	230	50	C/BF
				Tunisia	220	50	C

# Use of the accessories

## The card


Pictures can be recorded on the optional card.

The internal memory and card are the camera's media for recording pictures, similar to film in a film camera. Pictures recorded to the internal memory or card can be easily erased on the camera or processed using a computer.

Unlike portable storage media, the internal memory cannot be removed or exchanged.

The number of recordable pictures can be increased by using a card with a larger capacity.

- ① Index area  
You can use this space to write the contents of the card.
- ② Contact area  
The part where the data transferred from the camera enters the card.

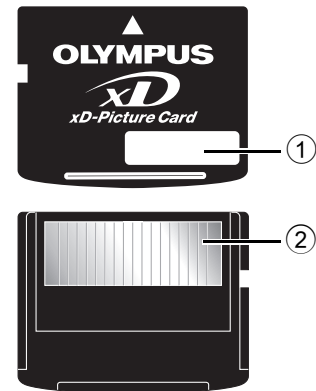

## Compatible cards

xD-Picture Card 16MB – 2GB (Type H/M, Standard)


## Using the internal memory or card

You can confirm on the monitor whether the internal memory or card is being used during shooting and playback operations.

### Shooting mode



### Playback mode

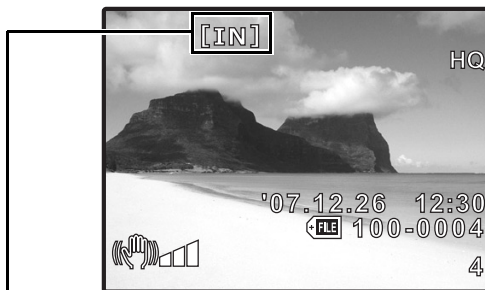


Memory indicator  
[IN]: When using the internal memory  
[xD]: When using a card

## ! Note

- Do not open the battery/card compartment cover while the card access lamp is blinking, as this indicates that data is being read or written. Doing so may damage the data in the internal memory or the card and render the internal memory or card unusable.

Card access lamp

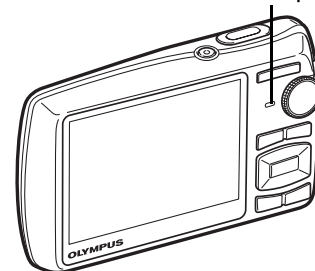

## AC adapter

An AC adapter is useful for time-consuming tasks such as image downloads to a computer or when running a slideshow for a long period of time. To use an AC adapter for this camera, the multi-adapter (CB-MA1/accessory) is required.

Do not use any other AC adapter with this camera.


## Using your charger and AC adapter abroad

- The charger and AC adapter can be used in most home electrical sources within the range of 100 V to 240 V AC (50/60Hz) around the world. However, depending on the country or area you are in, the AC wall outlet may be shaped differently and the charger may require a plug adapter to match the wall outlet. For details, ask at your local electrical shop or travel agent.
- Do not use travel voltage converters as they could damage your charger and AC adapter.


## WEATHERPROOF FEATURE

This camera is weatherproof, but it cannot be used underwater. When the camera exterior gets wet, turning the camera on or off or zooming in or out impairs its weatherproof performance. Immediately wipe the camera off to remove water droplets before its use if it gets wet. Olympus will not assume any responsibility for malfunction of the camera caused by water getting inside as a result of misuse by the user. The camera is weatherproof and is not damaged by water spray from any direction.

Observe the following precautions when using the camera.

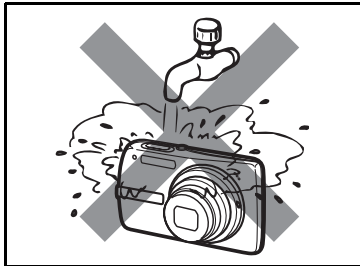

- Do not wash the camera with water.

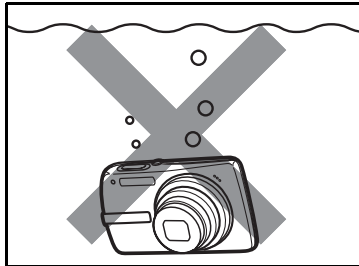


- Do not drop the camera into water.



- Do not take pictures underwater.

**Water may get inside the camera if the battery/card compartment cover or connector cover are not firmly closed.**

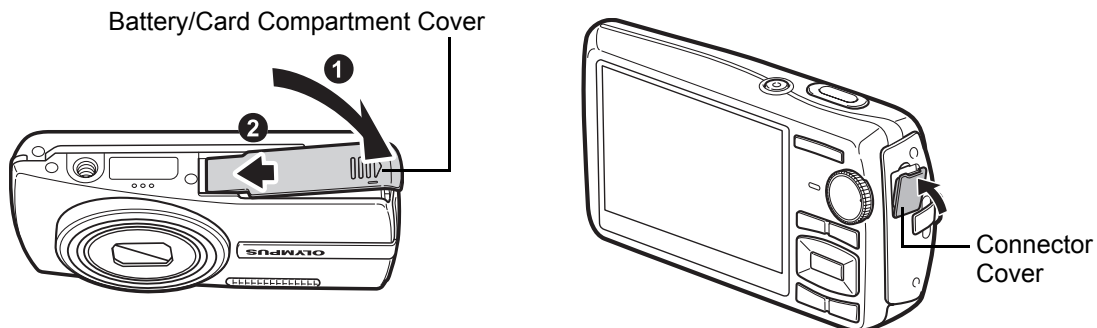

- Do not open or close the battery/card compartment cover or connector cover while the camera is wet.
- The rechargeable battery and other camera accessories are not weatherproof.



### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED OLYMPUS SERVICE PERSONNEL.



An exclamation mark enclosed in a triangle alerts you to important operating and maintenance instructions in the documentation provided with the product.



DANGER

If the product is used without observing the information given under this symbol, serious injury or death may result.



WARNING

If the product is used without observing the information given under this symbol, injury or death may result.



CAUTION

If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or loss of valuable data may result.

### WARNING!

**TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK, NEVER DISASSEMBLE, EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.**

## General Precautions

**Read All Instructions** — Before you use the product, read all operating instructions. Save all manuals and documentation for future reference.

**Cleaning** — Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product.

**Attachments** — For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.

**Water and Moisture** — For precautions on products with weatherproof designs, read the weatherproofing sections.

**Location** — To avoid damage to the product, mount the product securely on a stable tripod, stand, or bracket.

**Power Source** — Connect this product only to the power source described on the product label.

**Lightning** — If a lightning storm occurs while using an AC adapter, remove it from the wall outlet immediately.

**Foreign Objects** — To avoid personal injury, never insert a metal object into the product.

**Heat** — Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers.

## Handling the Camera



### WARNING

- **Do not use the camera near flammable or explosive gases.**
- **Do not use the flash and LED on people (infants, small children, etc.) at close range.**
  - You must be at least 1 m (3 ft.) away from the faces of your subjects. Firing the flash too close to the subject's eyes could cause a momentary loss of vision.
- **Keep young children and infants away from the camera.**
  - Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury:
    - Becoming entangled in the camera strap, causing strangulation.
    - Accidentally swallowing the battery, cards or other small parts.
    - Accidentally firing the flash into their own eyes or those of another child.
    - Accidentally being injured by the moving parts of the camera.
- **Do not look at the sun or strong lights with the camera.**
- **Do not use or store the camera in dusty or humid places.**
- **Do not cover the flash with a hand while firing.**



### CAUTION

- **Stop using the camera immediately if you notice any unusual odors, noise, or smoke around it.**
  - Never remove the batteries with bare hands, which may cause a fire or burn your hands.
- **Never hold or operate the camera with wet hands.**
- **Do not leave the camera in places where it may be subject to extremely high temperatures.**
  - Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire. Do not use the charger or AC adapter if it is covered (such as a blanket). This could cause overheating, resulting in fire.
- **Handle the camera with care to avoid getting a low-temperature burn.**
  - When the camera contains metal parts, overheating can result in a low-temperature burn. Pay attention to the following:
    - When used for a long period, the camera will get hot. If you hold on to the camera in this state, a low-temperature burn may be caused.
    - In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures.
- **Be careful with the strap.**
  - Be careful with the strap when you carry the camera. It could easily catch on stray objects - and cause serious damage.

## Battery Handling Precautions

Follow these important guidelines to prevent batteries from leaking, overheating, burning, exploding, or causing electrical shocks or burns.



### DANGER

- The camera uses a lithium ion battery specified by Olympus. Charge the battery with the specified charger. Do not use any other chargers.
- Never heat or incinerate batteries.
- Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal objects such as jewelry, pins, fasteners, etc.
- Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.

- To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way, by soldering, etc.
- If battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention immediately.
- Always store batteries out of the reach of small children. If a child accidentally swallows a battery, seek medical attention immediately.

## **WARNING**

- Keep batteries dry at all times.
- To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.
- Insert the battery carefully as described in the operating instructions.
- If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.
- Do not use a battery if it is cracked or broken.
- If a battery leaks, becomes discolored or deformed, or becomes abnormal in any other way during operation, stop using the camera.
- If a battery leaks fluid onto your clothing or skin, remove the clothing and flush the affected area with clean, running cold water immediately. If the fluid burns your skin, seek medical attention immediately.
- Never subject batteries to strong shocks or continuous vibration.

## **CAUTION**

- Before loading, always inspect the battery carefully for leaks, discoloration, warping, or any other abnormality.
- The battery may become hot during prolonged use. To avoid minor burns, do not remove it immediately after using the camera.
- Always unload the battery from the camera before storing the camera for a long period.

### **Caution for Usage Environment**

- To protect the high-precision technology contained in this product, never leave the camera in the places listed below, no matter if in use or storage:
  - Places where temperatures and/or humidity are high or go through extreme changes. Direct sunlight, beaches, locked cars, or near other heat sources (stove, radiator, etc.) or humidifiers.
  - In sandy or dusty environments.
  - Near flammable items or explosives.
  - In wet places, such as bathrooms or in the rain. When using products with weatherproof designs, read their manuals as well.
  - In places prone to strong vibrations.
- Never drop the camera or subject it to severe shocks or vibrations.
- When mounted on a tripod, adjust the position of the camera with the tripod head. Do not twist the camera.
- Do not touch electric contacts on cameras.
- Do not leave the camera pointed directly at the sun. This may cause lens or shutter curtain damage, color failure, ghosting on the CCD, or may possibly cause fires.
- Do not push or pull severely on the lens.
- Before storing the camera for a long period, remove the battery. Select a cool, dry location for storage to prevent condensation or mold from forming inside the camera. After storage, test the camera by turning it on and pressing the shutter release button to make sure that it is operating normally.
- Always observe the operating environment restrictions described in the camera's manual.

## Battery Handling Precautions

- This camera uses a lithium ion battery specified by Olympus. Do not use any other type of battery. For safe and proper use, read the battery's instruction manual carefully before using it.
- If the battery's terminals get wet or greasy, camera contact failure may result. Wipe the battery well with a dry cloth before use.
- Always charge a battery when using it for the first time, or if it has not been used for a long period.
- When operating the camera with battery power at low temperatures, try to keep the camera and spare battery as warm as possible. A battery that has run down at low temperatures may be restored after it is warmed at room temperature.
- The number of pictures you can take may vary depending on the shooting conditions or battery.
- Before going on a long trip, and especially before traveling abroad, purchase extra batteries. A recommended battery may be difficult to obtain while traveling.
- Please recycle batteries to help save our planet's resources. When you throw away dead batteries, be sure to cover their terminals and always observe local laws and regulations.

## Monitor

- Do not push the monitor forcibly; otherwise the image may become vague, resulting in a playback mode failure or damage to the monitor.
- A strip of light may appear on the top/bottom of the monitor, but this is not a malfunction.
- When a subject is viewed diagonally in the camera, the edges may appear zigzagged on the monitor. This is not a malfunction; it will be less noticeable in playback mode.
- In places subject to low temperatures, the monitor may take a long time to turn on or its color may change temporarily. When using the camera in extremely cold places, it is a good idea to occasionally place it in a warm place. A monitor exhibiting poor performance due to low temperatures will recover in normal temperatures.
- The LCD used for the monitor is made with high-precision technology. However, black spots or bright spots of light may appear constantly on the Monitor. Due to its characteristics or the angle at which you are viewing the monitor, the spot may not be uniform in color and brightness. This is not a malfunction.

## Legal and Other Notices

- Olympus makes no representations or warranties regarding any damages, or benefit expected by using this unit lawfully, or any request from a third person, which are caused by the inappropriate use of this product.
- Olympus makes no representations or warranties regarding any damages or any benefit expected by using this unit lawfully which are caused by erasing picture data.

## Disclaimer of Warranty

- Olympus makes no representations or warranties, either expressed or implied, by or concerning any content of these written materials or software, and in no event shall be liable for any implied warranty of merchantability or fitness for any particular purpose or for any consequential, incidental or indirect damages (including but not limited to damages for loss of business profits, business interruption and loss of business information) arising from the use or inability to use these written materials or software or equipment. Some countries do not allow the exclusion or limitation of liability for consequential or incidental damages, so the above limitations may not apply to you.
- Olympus reserves all rights to this manual.

## Warning

Unauthorized photographing or use of copyrighted material may violate applicable copyright laws. Olympus assumes no responsibility for unauthorized photographing, use or other acts that infringe upon the rights of copyright owners.

## Copyright Notice

All rights reserved. No part of these written materials or this software may be reproduced or used in any form or by any means, electronic or mechanical, including photocopying and recording or the use of any type of information storage and retrieval system, without the prior written permission of Olympus. No liability is assumed with respect to the use of the information contained in these written materials or software, or for damages resulting from the use of the information contained therein. Olympus reserves the right to alter the features and contents of this publication or software without obligation or advance notice.

## FCC Notice

- Radio and Television Interference
- Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate this equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Adjust or relocate the receiving antenna.
  - Increase the distance between the camera and receiver.
  - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
  - Consult your dealer or an experienced radio/TV technician for help. Only the OLYMPUS-supplied USB cable should be used to connect the camera to USB enabled personal computers (PC).

Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

## For customers in North and South America

### For customers in the USA

Declaration of Conformity

Model Number : Stylus 820/ $\mu$  820

Trade Name : OLYMPUS

Responsible Party : **OLYMPUS IMAGING AMERICA INC.**

Address : 3500 Corporate Parkway, P.O. Box 610, Center Valley,  
PA 18034-0610, U.S.A.

Telephone Number : 484-896-5000

Tested To Comply With FCC Standards  
FOR HOME OR OFFICE USE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### For customers in Canada

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

## Trademarks

- IBM is a registered trademark of International Business Machines Corporation.
- Microsoft and Windows are registered trademarks of Microsoft Corporation.
- Macintosh is a trademark of Apple Inc.
- xD-Picture Card™ is a trademark.
- All other company and product names are registered trademarks and/or trademarks of their respective owners.
- The standards for camera file systems referred to in this manual are the "Design Rule for Camera File System/DCF" standards stipulated by the Japan Electronics and Information Technology Industries Association (JEITA).

# SPECIFICATIONS

## ● Camera

Product type	: Digital camera (for recording and playback)
Recording system	
Still pictures	: Digital recording, JPEG (in accordance with Design rule for Camera File system (DCF))
Applicable standards	: Exif 2.2, Digital Print Order Format (DPOF), PRINT Image Matching III, PictBridge
Sound with still pictures	: Wave format
Movies	: AVI Motion JPEG
Memory	: Internal memory xD-Picture Card 16 MB to 2 GB (Type H/M, Standard)
No. of effective pixels	: 8,000,000 pixels
Image pickup device	: 1/2.35" CCD (primary color filter), 8,500,000 (gross)
Lens	: Olympus lens 6.4 to 32.0 mm, f3.3 to 5.0 (equivalent to 36 to 180 mm on a 35 mm camera)
Photometric system	: Digital ESP metering, spot metering system
Shutter speed	: 4 to 1/2000 sec.
Shooting range	: 0.7 m (2.3 ft.) to $\infty$ (W/T) (normal) 0.2 m (0.7 ft.) to $\infty$ (W), 0.6 m (2.0 ft.) to $\infty$ (T) (macro mode) 0.03 m (1.2 in.) to 0.7 m (2.3 ft.) (W only) (super macro mode)
Monitor	: 2.7" TFT color LCD display, 230,000 pixels
Flash charge time	: Approx. 4 sec. (for full flash discharge at room temperature using a new fully charged battery)
Outer connectors	: Multi-connector (DC-IN jack, USB connector, A/V OUT jack)
Automatic calendar system	: 2000 up to 2099
Water resistance	
Type	: Equivalent to IEC Standard publication 529 IPX4 (under OLYMPUS test conditions)
Meaning	: Camera is not damaged by water spray from any direction.
Operating environment	
Temperature	: 0°C to 40°C (32°F to 104°F) (operation), -20°C to 60°C (-4°F to 140°F) (storage)
Humidity	: 30% to 90% (operation)/10% to 90% (storage)
Power supply	: One Olympus lithium ion battery (LI-42B/LI-40B) or Olympus AC adapter
Dimensions	: 96.4 mm (W) × 56.4 mm (H) × 24.3 mm (D) (3.8 × 2.2 × 0.9 in.) (excluding protrusions)
Weight	: 125 g (4.4 oz) (excluding battery and card)

## ● Lithium ion battery (LI-42B)

Product type	: Lithium ion rechargeable battery
Standard voltage	: DC 3.7 V
Standard capacity	: 740 mAh
Battery life	: Approx. 300 full charges (varies on usage)
Operating environment	
Temperature	: 0°C to 40°C (32°F to 104°F) (charging)/ -10°C to 60°C (14°F to 140°F) (operation)/ -20°C to 35°C (-4°F to 95°F) (storage)
Dimensions	: 31.5 × 39.5 × 6 mm (1.2 × 1.5 × 0.2 in.)
Weight	: Approx. 15 g (0.5 oz)



## ● Battery charger (LI-40C)

Power requirements	: AC 100 to 240 V (50 to 60 Hz) 3.2 VA (100 V) to 5.0 VA (240 V)
Output	: DC 4.2 V, 200 mA
Charging time	: Approx. 5 hrs.
Operating environment	
Temperature	: 0°C to 40°C (32°F to 104°F) (operation)/ -20°C to 60°C (-4°F to 140°F) (storage)
Dimensions	: 62 × 23 × 90 mm (2.4 × 0.9 × 3.5 in.)
Weight	: Approx. 65 g (2.2 oz)

Design and specifications subject to change without notice.


# CAMERA DIAGRAM

## Camera

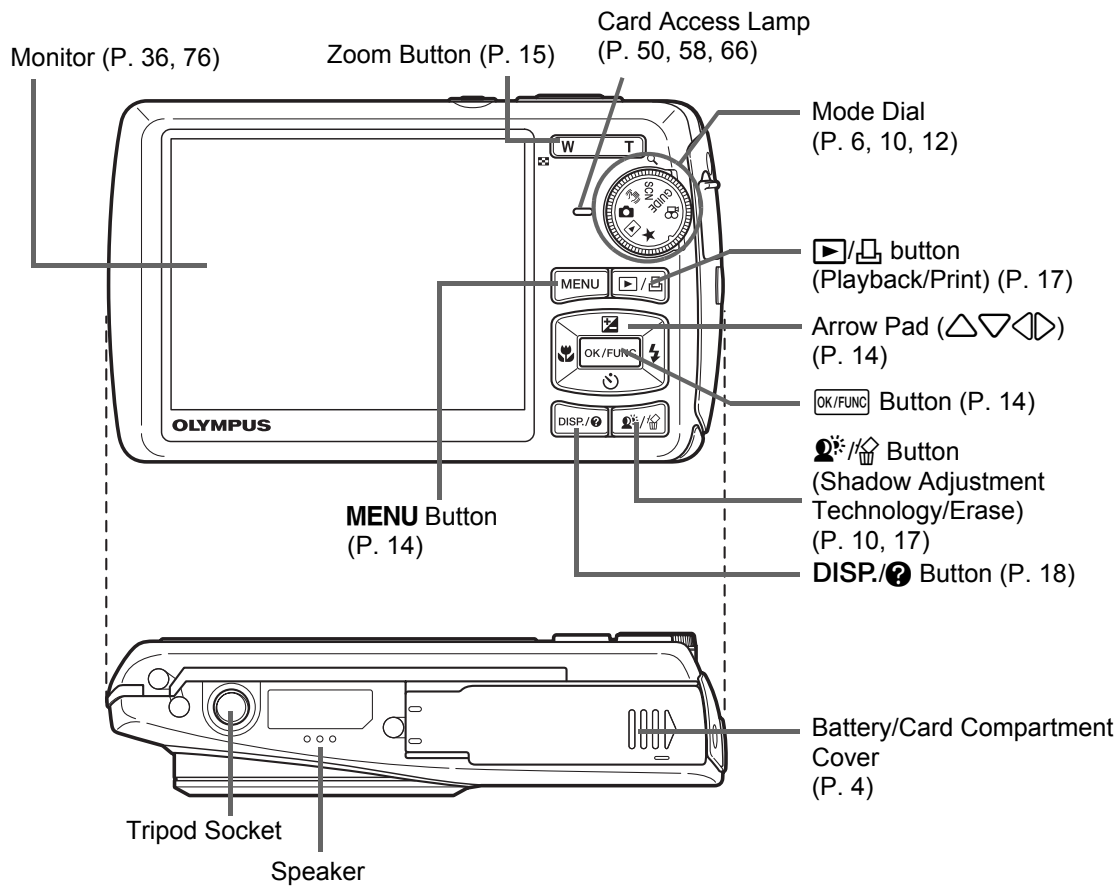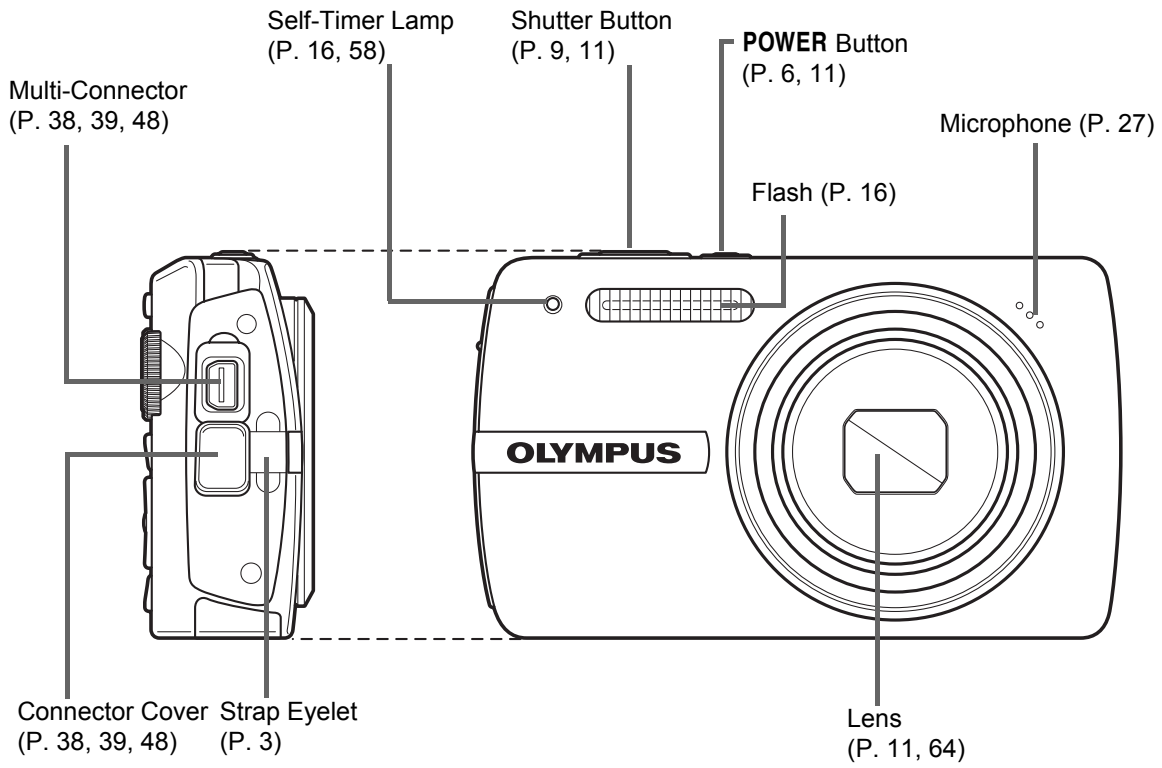


## Monitor Symbols & Icons

### ● Monitor - Shooting mode

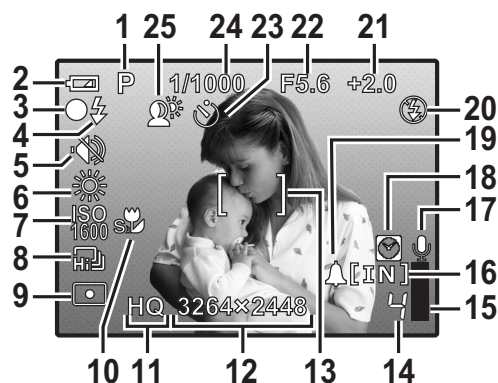

Still picture

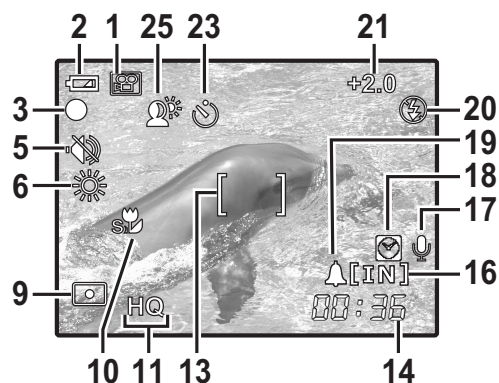


Movie

	Item	Indication	Ref. Page
1	Shooting modes	<b>AUTO</b> , <b>P</b> ,  ,  ,  ,  , etc.	P. 12, 14, 24
2	Battery check	= full power,  = low power	P. 61
3	Green lamp	○ = Auto Focus Lock	P. 9, 11, 58
4	Flash standby Camera movement warning/ flash charge	(Lit) (Blinks)	P. 53
5	Silent mode		P. 27
6	White balance		P. 25
7	ISO	ISO 50, ISO 400, ISO 1600, etc.	P. 25
8	Drive		P. 26
9	Spot metering		P. 26
10	Macro mode Super macro mode		P. 16
11	Image quality	SHQ, HQ, SQ1, SQ2, 16:9, SQ	P. 21
12	Image size	3264 × 2448, 2560 × 1920, 640 × 480, etc.	P. 21
13	AF target mark	[ ]	P. 9, 27
14	Number of storable still pictures Remaining recording time	4 00:36	P. 57
15	Memory gauge	(maximum reached)	P. 53
16	Current memory	[IN] (Recording pictures to the internal memory), [xD] (Recording pictures to the card)	P. 66
17	Sound record		P. 27
18	Dualtime		P. 37
19	Alarm		P. 37
20	Flash mode		P. 16
21	Exposure compensation	-2.0 – +2.0	P. 16
22	Aperture value	F5.6, F4.0, etc.	P. 9
23	Self-timer		P. 16
24	Shutter speed	4 to 1/2000	P. 9

	Item	Indication	Ref. Page
25	Shadow Adjustment Technology		P. 17



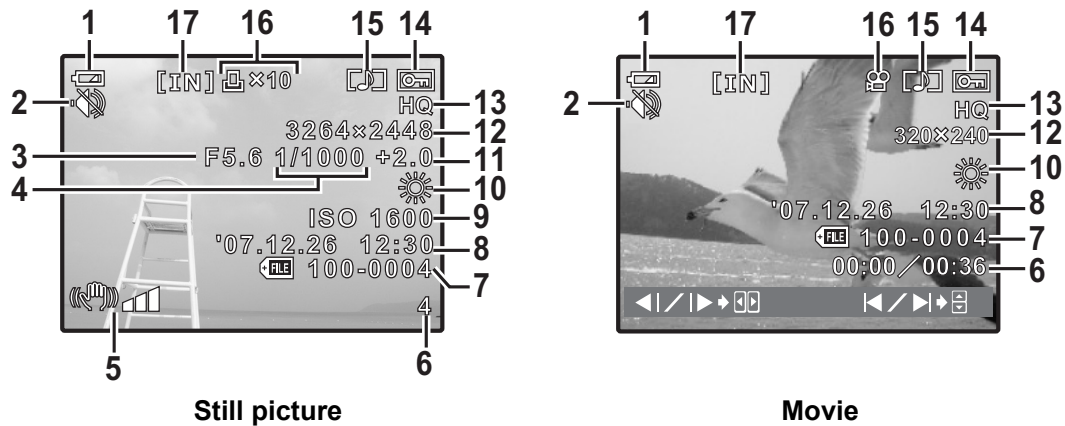


 


## ● Monitor - Playback mode




 





 





 


	Item	Indication	Ref. Page
1	Battery check	= full power,  = low power	P. 61
2	Silent mode		P. 27
3	Aperture value	F5.6, F4.0, etc.	–
4	Shutter speed	4 – 1/2000	–
5	Blur caused by moving or shaking hands	(stabilized pictures/corrected pictures) (pictures that can be corrected)	P. 29
6	Number of frames Elapsed time/ Total recording time	4 00:00/00:36	P. 36 P. 29
7	File number	100-0004	P. 36
8	Date and time	'07.12.26 12:30	P. 7, 36
9	ISO	ISO 50, ISO 400, ISO 1600, etc.	P. 25
10	White balance	WB AUTO, , , ,  –	P. 25
11	Exposure compensation	-2.0 – +2.0	P. 16
12	Image size	3264 × 2448, 2560 × 1920, 640 × 480, etc.	P. 21
13	Image quality	SHQ, HQ, SQ1, SQ2, 16:9, SQ	P. 21
14	Protect		P. 33
15	Sound record		P. 33
16	Print reservation/Number of prints Movie	×10 	P. 43 P. 28
17	Current memory	[IN] (Playing back the picture in the internal memory), [xD] (Playing back the picture in the card)	P. 66

# Index

DISP./ button .....	18	DIS MOVIE MODE .....	27
button (exposure compensation) .....	16	Display language   .....	35
button (flash mode) .....	16	DPOF .....	42
button (macro) .....	16	DRIVE .....	26
button (OK/FUNC) .....	14	DUALTIME  .....	37
button (playback/print) .....	17	<b>E</b>	
button (self-timer) .....	16	EASY PRINT .....	39
button (Shadow Adjustment Technology/erase) .....	17	EDIT .....	30
16:9 .....	21	EDIT (movies) .....	32
<b>A</b>		ERASE .....	33
AC adapter .....	67	Erase .....	10, 17
ADD FAVORITE .....	13, 30	Error message .....	60
Adding sound to still pictures  .....	33	ESP .....	26
AF MODE .....	27	ESP/ .....	26
ALARM CLOCK  .....	37	EV .....	16
ALL ERASE  .....	34	Exposure .....	16
ALL INDEX .....	41	Exposure compensation  .....	16, 77
ALL PRINT .....	41	<b>F</b>	
All-frame reservation  .....	44	FACE DETECT (AF MODE) .....	27
Arrow pad (   ) .....	14	FILE NAME .....	36, 41
AUTO (Auto-flash) .....	16	File name .....	36
AUTO (Full auto mode) .....	14	Fill-in flash  .....	16
AUTO (ISO) .....	25	FINE ZOOM .....	26
AUTO (WB) WB AUTO .....	25	Flash .....	16
Auto focus .....	54	Flash charge .....	53, 76
AV cable .....	3, 38	Flash mode  .....	11, 16
<b>B</b>		Flash off  .....	16
BACKUP .....	34	Fluorescent lamp 1/2/3  .....	25
Battery .....	4, 64	Focus .....	9, 11, 54, 58
Battery charger .....	3, 4, 64, 67	Focus lock .....	11
Battery check .....	76	FORMAT .....	34
Battery/card compartment cover .....	4	Format .....	34
BEEP .....	35	FRAME .....	31
BGM .....	28	Frame assist .....	18
<b>C</b>		Frame number .....	77
CALENDAR .....	31	Function menu .....	14
Calendar display .....	15	<b>G</b>	
CAMERA MENU .....	21, 25	Green lamp .....	9, 11, 54, 58
Card .....	22, 34, 66	<b>GUIDE</b> (Shooting guide) .....	6, 12
Card access lamp .....	50, 58, 66	<b>H</b>	
CCD .....	36	High speed sequential shooting  .....	26
Close-up playback  .....	15	Histogram display .....	18, 59
Cloudy day  .....	25	HQ .....	21
COLOR EDIT .....	30	<b>I</b>	
Compression .....	21	iESP .....	27
Connector cover .....	38, 39, 48	IMAGE QUALITY .....	21
Continuous recording time .....	57	Image size .....	21
Cropping pictures  .....	30, 41, 43	Image stabilizer () .....	6, 12
CUSTOM PRINT .....	40	INDEX .....	32
<b>D</b>		Index display  .....	15
Date and time  .....	7, 36	Information displays .....	18
DIGITAL ZOOM .....	26	Internal memory .....	34, 66
Direct printing .....	39	ISO .....	25
DIS EDIT .....	29		

<b>L</b>	
LABEL .....	31
LAYOUT .....	31
Lens.....	11, 64
LIGHTING FIX.....	29
Lithium ion battery .....	3, 4, 64
Low compression .....	21
<b>M</b>	
Macro mode  .....	11, 16
MEMORY FORMAT .....	34
Memory gauge .....	53
Menu .....	19
<b>MENU</b> button (MENU) .....	14
Menu guide.....	18
MENU THEME .....	35
Microphone.....	27
Mode dial.....	6, 10, 12
Monitor .....	36, 76
Monitor brightness adjustment  .....	36
Monitor Symbols & Icons.....	76
MOVIE PLAY.....	28
MULTI PRINT.....	41
Multi-connector.....	38, 39, 48
<b>N</b>	
NTSC.....	38
Number of storable still pictures .....	57
<b>O</b>	
OLYMPUS Master.....	3, 45
Operation guide.....	19, 40, 43
Optical zoom .....	15, 26
<b>P</b>	
P (Program auto).....	14
P/AUTO .....	14
PAL.....	38
PANORAMA.....	22
PC .....	48
PERFECT FIX .....	29
PictBridge .....	39
Picture rotation  .....	33
PIXEL MAPPING.....	36
Play "My Favorite" ★ .....	13
PLAYBACK MENU.....	28, 33
Playback mode  .....	10, 11, 13, 15, 18, 34
Playback on a TV .....	38
Playing time/Total recording time .....	29
<b>POWER</b> button.....	6, 11
POWER SAVE .....	38
Press completely .....	9, 11
Press halfway .....	9, 11
PRINT ORDER  .....	32, 41
Print settings  .....	42
Printing pictures.....	39
Protect  .....	33
PW ON SETUP .....	35
<b>R</b>	
REC VIEW.....	35
Recording movies  .....	11

Recording sound with still pictures  .....	27
REDEYE FIX.....	29
Red-eye reduction flash  .....	16
RESET .....	22
Resizing  .....	30
<b>S</b>	
<b>SCN</b> (Scene) .....	6, 12, 24
SEL. IMAGE .....	34
Self-timer lamp .....	16, 58
Self-timer  .....	11, 16
SETUP menus .....	34
SHOOT & SELECT1/2   .....	25
Shooting mode .....	11, 15, 18, 34
Shooting still pictures  .....	6, 12
SHQ .....	21
Shutter button.....	9, 11
SHUTTER SOUND .....	35
SILENT MODE  .....	27
Single-frame playback.....	15
Single-frame reservation  .....	43
Single-frame shooting  .....	26
Sleep mode .....	53
SLIDESHOW.....	28
SMILE SHOT  .....	24
Speaker.....	75
SPOT (AF MODE).....	27
Spot metering  .....	26
SQ .....	21
SQ1 .....	21
SQ2 .....	21
STANDARD .....	39
Standard compression .....	21
Strap.....	3
Sunny day  .....	25
Super macro mode  .....	11, 16
<b>T</b>	
Top menu .....	19
Tripod socket.....	75
Tungsten light  .....	25
Turn the camera on.....	6
TYPE .....	28
<b>U</b>	
USB cable .....	3, 39, 45, 48, 50
<b>V</b>	
VIDEO OUT .....	38
VOLUME .....	35
<b>W</b>	
Warning sound  .....	35
White balance WB.....	25
<b>X</b>	
xD-Picture Card.....	22, 66
<b>Z</b>	
Zoom .....	15, 26
Zoom button .....	15, 26









# OLYMPUS®

<http://www.olympusamerica.com/>

## OLYMPUS IMAGING AMERICA INC.

3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A. Tel. 484-896-5000

### Technical Support (USA)

24/7 online automated help: <http://www.olympusamerica.com/support>  
Phone customer support: Tel. 1-888-553-4448 (Toll-free)

Our phone customer support is available from 8 am to 10 pm (Monday to Friday) ET  
<http://olympusamerica.com/contactus>

Olympus software updates can be obtained at: <http://www.olympusamerica.com/digital>  
To find the nearest Service Centers, please visit: <http://www.olympusamerica.com/digital>,  
and click on the Worldwide Warranty icon at the bottom of the page.

### Service Centers

#### U.S.A.:

**California** **Olympus Imaging America Inc.**  
10805 Holder Street Suite 170  
Cypress, CA 90630-5145  
Tel: (888) 553-4448

**New York** **Olympus Imaging America Inc.**  
400 Rabro Drive  
Hauppauge, NY 11788-4258  
Tel: (888) 553-4448

**Canada:** **Olympus Canada Inc.**  
**Consumer Products Group**  
151 Telson Road  
Markham, Ontario Canada L3R 1E7  
Tel. (888)553-4448

**Mexico:** **Olympus Imaging de Mexico S.A. de C.V.**  
WTC Mexico,  
Montecito No.38 - Lobby - Office 3  
Col. Napoles, Mexico D.F. 03810  
Tel. (01800)800-2128  
E-mail: [oimx@olympus.com](mailto:oimx@olympus.com)

**Argentina:** **Jesus Labrador**  
Paraguay 755 PB, C1057AAI - Buenos Aires  
Tel: (011) 4313-3174 Fax: (011) 4312-5239  
E-Mail: [olympus@jesuslabrador.com.ar](mailto:olympus@jesuslabrador.com.ar)  
**Jesus Labrador**  
Bartolome Mitre 860  
C1036AAP - Buenos Aires  
Tel: (011) 4331-1227 Fax: (011) 4331-1247  
E-mail: [service@basr.com.ar](mailto:service@basr.com.ar)

#### Brazil:

**Rio de Janeiro** **Assistec**  
Rua Uruguaiana, 94-Sobrelaja  
Centro-Rio de Janeiro CEP 20050-091  
Tel: (021) 2242-3236 Fax: (021) 2242-3236  
E-Mail: [rio@assistecs.com.br](mailto:rio@assistecs.com.br)

**Sao Paulo** **Assistec**  
Rua Avanhandava 126, 3 Andar  
Consolação, São Paulo  
Tel: (011) 3123-3100 Fax: (011) 3214-0706  
E-mail: [ASSISTECSS@UOL.COM.BR](mailto:ASSISTECSS@UOL.COM.BR)

**Assistec**  
Filial Shopping Eldorado  
Av. Rebouças 3970, 1 Subsolo, Loja 1035  
Pinheiros, Sao Paulo  
Tel: (011) 3815-3054 Fax: (011) 3814-4398  
E-mail: [ASSISTECSS@UOL.COM.BR](mailto:ASSISTECSS@UOL.COM.BR)

**Chile:** **REIFSCHNEIDER S.A.**  
Camino El Conquistador del Monte 5024  
Huechuraba, Santiago  
Tel: 56-2-6781200 Fax: 56-2-6781202  
E-mail : [olympus@reifschneider.cl](mailto:olympus@reifschneider.cl),  
[serviciotecnico@reifschneider.cl](mailto:serviciotecnico@reifschneider.cl)

**Colombia:** **CV Tronica LTDA**  
Calle 68 No 12-57, Bogota  
Tel: (0571)235-7260/348-1573  
Fax: (0571) 348-1574  
E-mail: [servicio@cvtronica.com](mailto:servicio@cvtronica.com)

**CV Tronica LTDA**  
Cra 9 No 23-49 Local 215 C.C Intercentro, Bogota  
Tel: (0571)284-4365

**CV Tronica LTDA**  
Av, Cra 15 No 105A-22 Piso 2 Local 5, Bogota  
Tel: (0571)637-3540

**Panama:** **FOTOSER**  
Edif. El Paical, Oficina No3, P.A.  
Urb. Herbruger, Transistmica  
(Detras del S/M Riba Smith),  
Tel/Fax: (507) 261-0436  
E-mail: [rearanda@rocketmail.com](mailto:rearanda@rocketmail.com)

**Uruguay:** **Fotocamara S.R.L.**  
Rondeau 1470 Montevideo  
Tel: (02) 900-2004 Fax: (02) 900-8430  
E-mail: [FOTOCAM@ADINET.COM.UY](mailto:FOTOCAM@ADINET.COM.UY)

**Venezuela:** **Micron C.A.**  
4ta. transversal Urb. Horizonte,  
Edificio América, Mezanine, Caracas 1070-A  
Tel: (0212) 238-3526 Fax: (0212) 239-8598  
E-mail: [serviciotecnico@micron.com.ve](mailto:serviciotecnico@micron.com.ve)

© 2007 OLYMPUS IMAGING CORP.

Printed in Japan  
1AG6P1P3581--

VS228701