


What's In The Box



microSD
card



Handheld mount

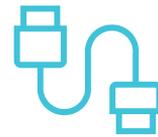

USB cable

Good to know...



This is the thumb screw. It allows you to attach the arm, handle and tripod to the GoPro. It'll make sure the GoPro is securely attached to your chosen accessory, and you can loosen it to adjust the angle of the GoPro. Make sure it's screwed in properly and tightened before using the camera to make sure it doesn't fall forward or fall off!



To charge the GoPro: Remove the case, press the button on the right side and slide it down to access the HDMI and USB ports. The charging cable fits into the USB slot - charge it using your laptop or a USB charger.



To download your footage: Press the button on the bottom and slide to access the battery and memory card slot. Either use nimble fingers or remove the battery first to make it a little easier for yourself, press the memory card to release it and then pull it out. Pop it into the memory card adaptor (which we provide) and insert it into your laptop. Or you can just plug it in (follow the instructions above).



For hands-free fun, use voice commands! Find the list of commands and change the language by swiping down from the top of the screen, select preferences and scroll down to find the voice control menu.

How to get started...

- 1. Switch it on by holding down the mode button on the side***
- 2. Press the same button to choose your shooting mode (video, photo, photo timelapse, video timelapse)***
- 3. Alter options for that shooting mode on the touch screen e.g. for timelapse you can choose at what intervals it shoots***
- 4. Press the red button on the top to snap a picture, start filming or to get your timelapse going. Simply press the button again when you want to stop filming/timelapse.***

Using the tripod/grip/mount?

[Check out this youtube video](#)

Any problems? Let us know at www.libraryofthings.co.uk/repair

Pro Tip

You can 'mark' stand-out moments in your video so you know where all the good bits are! Whilst recording or playing back the video, either press the mode button or say 'GoPro HiLight' or 'That was sick' when you want to highlight.

Extended Reading

Explore some tips and tricks to unlock this little camera's full potential: www.youtube.com/watch?v=dLLO6PpCr2w

Before Returning...

- 1) Give it a wipe down if necessary - especially if you've used it in water. You might need to remove the casing on the GoPro and other accessories to dry it off properly.
- 2) Download your footage off the memory card to your laptop or save it somewhere secure. Clear the memory card, and fully charge the GoPro so it's ready for the next borrower.
- 3) Make sure it's got all its parts and pop it back to us!